MPH / UPPH / VPH - 5000 Series Powerhead Manual

5.00” Diameter

MagnumVenusProducts™

Rev. 09/2014

MagnumVenusProducts™

CORPORATE HEADQUARTERS and MANUFACTURING
200A Perimeter Park Road · Knoxville, TN 37922 · USA · Tel: +1 (865) 321-8809

TECHNOLOGY CENTER and MANUFACTURING
1862 Ives Ave. * Kent, WA 98032 * Tel 253-854-2660 * Fax 253-854-1666

E-mail: info@mvpind.com · www.mvpind.com

TABLE OF CONTENTS:

SECTION:	Page
TERMS & CONDITIONS OF SALE	4
SAFETY & WARNING INFORMATION	6
INTRODUCTION	15
VALVE BLOCK DISASSEMBLY	16
VALVE BLOCK REASSEMBLY	18
AIR CYLINDER DISASSEMBLY	20
PILOT VALVE REBUILD	21
AIR CYLINDER REASSEMBLY	23
PARTS DRAWINGS	24
REVISION INFORMATION	42

Terms & Conditions of Sale:

GSSC, Inc.'s Terms & Conditions of Sale ("Terms & Conditions") 588284v4

1. ACCEPTANCE: Acceptance of any purchase order from a customer or potential customer ("Buyer") is subject to credit approval by GSSC, Inc. ("Seller"), acceptance of the purchase order by Seller and, when applicable, any manufacturer, vendor, or other third party that provides goods to Seller for resale to Buyer ("Vendor"). If Seller, in its sole discretion, determines that Buyer's credit becomes unsatisfactory or it has reasonable grounds for insecurity, Seller reserves the right, upon notice to Buyer, to demand adequate assurance of due performance from Buyer and/or terminate any purchase order with no liability to Seller. BY REQUESTING A QUOTE FROM SELLER, ACCEPTING AN INVOICE FROM SELLER, OR PRESENTING A PURCHASE ORDER TO SELLER, BUYER CONFIRMS THAT THESE TERMS & CONDITIONS SHALL GOVERN ALL PURCHASES OF PRODUCTS OR MATERIALS PROVIDED TO BUYER BY SELLER ("GOODS"). GOODS SOLD BY SELLER ARE EXPRESSLY SUBJECT TO THE TERMS AND CONDITIONS SET FORTH HEREIN AND ANY DIFFERENT OR ADDITIONAL TERMS OR CONDITIONS SET FORTH IN A PURCHASE ORDER OR SIMILAR COMMUNICATION RECEIVED FROM BUYER ARE OBJECTED TO AND SHALL NOT BE BINDING UPON SELLER UNLESS SPECIFICALLY AGREED TO IN WRITING BY AN AUTHORIZED CORPORATE OFFICER OF SELLER.NO SELLER EMPLOYEE OR AGENT HAS THE AUTHORITY TO MODIFY THESE TERMS & CONDITIONS VERBALLY. SELLER OBJECTS TO AND REJECTS ANY TERMS BETWEEN BUYER AND ANY OTHER PARTY, AND NO SUCH TERMS, INCLUDING BUT NOT LIMITED TO ANY GOVERNMENT REGULATIONS OR "FLOWDOWN" TERMS, SHALL BE A PART OF OR INCORPORATED INTO ANY PURCHASE ORDER FROM BUYER TO SELLER, UNLESS AGREED TO IN WRITING BY AN AUTHORIZED REPRESENTATIVE OF SELLER.

2. PRICES AND TAXES: Buyer agrees to pay the prices quoted by Seller or listed on any related invoice, and is responsible for additional applicable shipping and handling charges, taxes, duties, and charges for import and export licenses and certificates. All prices quoted by Seller are subject to change without notice. Seller will generally collect applicable taxes along with the purchase price unless Buyer submits a valid tax exemption certificate, and indicates which Goods are covered by it. Prices on special-order Goods may be subject to change before shipment. In order to be corrected, any discrepancies in pricing and/or quantities on invoices must be reported by Buyer within thirty (30) days of the invoice date.

3. PAYMENT: Payment terms are 30 days net from the invoice date or upon such other terms approved by Seller in writing. Retainage shall not apply, and Buyer shall not hold back any retainage from Seller, even if retainage is part of any contract between Buyer and any other party. Payment is not contingent on Buyer's ability to collect or obtain funds from any other party. Credit card sales are billed at the time of purchase. Buyer expressly represents it is solvent at the time it places any purchase order with Seller. Seller, in its sole discretion, may determine that Buyer's financial condition requires full or partial payment prior to manufacture or shipment. If Buyer fails to make any payment when due, Seller reserves the right to suspend performance. Buyer agrees to pay a charge on all amounts past due at the rate of 1 ½% per month (18% per year) or the maximum lawful rate, whichever is less. In the event of non-payment, Buyer agrees to pay Seller's reasonable attorney fees and court costs, if any, incurred by Seller to collect payment, and all applicable interest charges. Seller may apply payments to any outstanding invoices unless Buyer provides specific payment direction.

4. TITLE AND RISK OF LOSS OR DAMAGE: As to Goods delivered directly by Seller, title passes upon delivery at the place Buyer receives possession; and, thereafter, all risk of loss or damage shall be on Buyer. All other sales are F.O.B., point of shipment, and Buyer takes title and assumes responsibility for risk of loss or damage at the point of shipment for such sales. Claims for Goods damaged in transit are Buyer's sole responsibility when not delivered directly by Seller.

5. QUOTATIONS: All quotations expire thirty (30) days from the date of the quotation unless otherwise noted on the quotation. This time limit applies even if Buyer uses the quotation to submit a job or project bid to any other party.

6. ASSIGNMENT: The Buyer's rights and responsibilities under any purchase order or these Terms & Conditions shall not be assigned by Buyer without the express written consent of the Seller.

7. RETURN OF GOODS: Permission to return items must be requested and granted in advance. No credit will be given if items are returned prior to requesting and receiving permission. Subject to the foregoing, Seller shall accept returns of Goods for any reason for a period of thirty (30) days following shipment for exchange or refund of the purchase price; provided, that such Goods must be unused and are subject to a 15% restocking charge, which may be increased or decreased, in the Seller's sole discretion, depending on the reason for such return. Any Goods which were special ordered by Buyer are may not be returned, and any such Goods which are returned are subject to a restocking/cancellation fee of 100% of the cost of the Goods. Goods shall be deemed accepted by Buyer (and cannot thereafter be returned), if Buyer fails to object to the Goods within thirty (30) days after the Goods are received by Buyer.

8. CANCELLATION: The Buyer may cancel any purchase order prior to shipment of the Goods by mutual agreement of the parties and upon payment to Seller of reasonable and proper cancellation charges.

9. TERMINATION: Seller may terminate the whole or any part of any purchase order if there is a material breach of these Terms & Conditions. In the event of any such breach, the Seller will provide Buyer with written notice of the nature of the breach and the Seller's intention to terminate for default. In the event Buyer does not cure such failure within ten (10) days of such notice, Seller may, by written notice, terminate the purchase order; provided, that Buyer shall continue its performance to the extent not terminated.

10. CHANGE IN BUYER'S FINANCIAL CONDITION: Seller reserves the right to cancel any order or to require full or partial payment in advance without liability to Seller in the event of: (i) insolvency of the Buyer; (ii) the filing of voluntary petition in bankruptcy by Buyer; (iii) the appointment of a Receiver or Trustee for the Buyer; (iv) the execution by Buyer of an assignment for benefit of creditors; or (v) past due payment on previous shipments to Buyer by Seller. Seller reserves the right to cancel Buyers credit at any time for any reason.

11. INTERPRETATION RESPONSIBILITY; PRODUCT USE AND SAFETY: Seller does not guarantee that the Goods it sells conform to any plans and specifications or intended use. When plans and specifications are involved, Buyer is solely responsible for verifying Seller's interpretations of such plans and specifications, and it is Buyer's sole responsibility to assure that Seller's Goods will be acceptable for any specific job. When Seller offers substitute Goods on any proposal, Buyer is solely responsible for confirming their acceptability.

12. DELIVERY: Shipping dates given in advance of actual shipment are approximate and not guaranteed. All contract dates and timelines begin upon receipt by Seller of a purchase order, Buyer's acceptance of these Terms & Conditions, and the payment of any required down payment.

13. EXCUSABLE DELAYS: Seller shall have no liability if its performance is delayed or prevented by causes beyond its reasonable control, including, without limitation, acts of nature, labor disputes, government priorities, transportation delays, insolvency or other inability to perform by any Vendor, or any other commercial impracticability. In the event of any such delay, the date of delivery or performance shall be extended for a period equal to the time lost by reason of delay. If Goods are held or stored beyond the delivery date for the convenience of Buyer, such Goods shall be so stored at the risk and expense of Buyer.

14. CLAIMS: Claims for any nonconforming Goods must be made by Buyer, in writing, within ten (10) days of Buyer's receipt of such Goods and must state with particularity all material facts concerning the claim then known to Buyer. Failure by Buyer to give notice within such ten (10) day period shall constitute an unqualified acceptance of such Goods by Buyer, and a waiver of any right to reject or revoke acceptance of such Goods.

15. WARRANTIES:
(a) SELLER'S WARRANTIES: Seller warrants that all Goods sold shall mechanically operate as specified and shall be free from faults in respect to materials and workmanship for a period of: (i) for parts, twelve (12) months from the date of invoice, and (ii) for systems, twelve (12) months from start-up, or, if earlier, eighteen (18) months from the date of the bill of lading. Seller also warrants that the Goods shall, upon payment in full by Buyer for the Goods, be free and clear of any security interests or liens. Buyer's exclusive remedy for breach of such warranties shall be limited to repair or replacement costs or termination of any security interests or liens, and Seller shall have no responsibility for reimbursing repair costs incurred by Buyer in connection with Goods without first giving written authorization for such charges. In any claims by the Buyer against the Seller in respect of the Goods, the liability of the Seller shall be limited to the value of the Goods. This warranty applies only to Goods properly used and maintained and does not apply to any Goods which are misused or neglected, or which has been installed, operated, repaired, altered or modified other than in accordance with instructions or written authorization by Seller. This warranty does not apply to any Goods not manufactured by Seller, and Buyer's sole warranty with respect to such Goods shall be that of the Seller's Vendor, if any.
(b) VENDOR'S WARRANTIES: Seller shall assign to Buyer any Vendor warranties and/or remedies provided to Seller by its Vendor.
(c) INTELLECTUAL PROPERTY INFRINGEMENT: SELLER DISCLAIMS ANY AND ALL WARRANTIES AND/OR INDEMNIFICATIONS AGAINST INFRINGEMENT OF ANY INTELLECTUAL PROPERTY RIGHTS OF ANY NATURE. SELLER SHALL, IF GIVEN PROMPT NOTICE BY BUYER OF ANY CLAIM OF INTELLECTUAL PROPERTY INFRINGEMENT WITH RESPECT TO ANY GOODS SOLD HEREUNDER, REQUEST THE APPLICABLE VENDOR TO GRANT FOR THE BUYER SUCH WARRANTY OR INDEMNITY RIGHTS AS SUCH VENDOR MAY CUSTOMARILY GIVE WITH RESPECT TO SUCH GOODS.
(d) LIMITATIONS: THERE ARE NO OTHER WARRANTIES WRITTEN OR ORAL, EXPRESS, IMPLIED OR BY STATUTE. SELLER SPECIFICALLY DISCLAIMS ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. NO REPAIR OF GOODS OR OTHER COSTS ARE ASSUMED BY SELLER UNLESS AGREED TO, IN ADVANCE, IN WRITING.
16. LIMITATIONS OF LIABILITY: UNLESS APPLICABLE LAW OTHERWISE REQUIRES, SELLER'S AND ANY VENDOR'S TOTAL LIABILITY TO BUYER, BUYER'S CUSTOMERS OR TO ANY OTHER PERSON, RELATING TO ANY PURCHASES GOVERNED BY THESE TERMS & CONDITIONS, FROM THE USE OF THE GOODS FURNISHED OR FROM ANY ADVICE, INFORMATION OR ASSISTANCE PROVIDED BY SELLER (BY ANY METHOD, INCLUDING A WEB SITE), IS LIMITED TO THE PRICE OF THE GOODS GIVING RISE TO THE CLAIM. NEITHER SELLER NOR ITS VENDORS SHALL BE LIABLE FOR ANY SPECIAL, INCIDENTAL, DIRECT, CONSEQUENTIAL OR PENAL DAMAGES, INCLUDING, BUT NOT LIMITED TO BACKCHARGES, LABOR COSTS, COSTS OF REMOVAL, REPLACEMENT, TESTING OR INSTALLATION, LOSS OF EFFICIENCY, LOSS OF PROFITS OR REVENUES, LOSS OF USE OF THE GOODS OR ANY ASSOCIATED GOODS, DAMAGE TO ASSOCIATED GOODS, LATENESS OR DELAYS IN DELIVERY, UNAVAILABILITY OF GOODS, COST OF CAPITAL, COST OF SUBSTITUTE GOODS, FACILITIES OR SERVICES, DOWNTIME, OR CLAIMS FROM BUYER'S CUSTOMERS OR OTHER PARTIES. IF SELLER FURNISHES BUYER WITH ADVICE OR OTHER ASSISTANCE WHICH CONCERNS ANY GOODS SUPPLIED HEREUNDER, OR ANY SYSTEM OR EQUIPMENT IN WHICH ANY SUCH GOODS MAY BE INSTALLED, AND WHICH IS NOT REQUIRED PURSUANT TO THESE TERMS & CONDITIONS, THE FURNISHING OF SUCH ADVICE OR ASSISTANCE WILL NOT SUBJECT SELLER TO ANY LIABILITY, WHETHER BASED ON CONTRACT, WARRANTY, TORT (INCLUDING NEGLIGENCE) OR OTHER GROUNDS.
17. BUYER'S USE OF GOODS: Many factors beyond Seller's control contribute to the success of the Buyer's finished products, such as raw materials used to manufacture the products. Seller is not liability for the quality or quantity of finished products produced by Buyer with the use of the Goods.
18. EXPORTS: If Goods are sold for export, Seller's standard terms & condition for export sales, if any, shall also apply. Acceptance of export orders is not valid unless confirmed in writing by Seller. Buyer, and not Seller, is responsible for compliance with all United States export control rules and regulations. Buyer shall not name Seller as shipper or exporter of record in connection with the export of any Goods purchased from Seller.
19. INSTALLATION: Installation of the Goods is the responsibility of Buyer, unless otherwise indicated in the quotation or invoice provided to Buyer. Notwithstanding the foregoing, however, Seller will provide installation supervision personnel within thirty (30) days of Buyer's request. If an installation for which the Seller is to participate is delayed by the Buyer more than six (6) months after the date of shipment of the Goods, or if Buyer's facility, materials, or parts are not prepared for installation for such period of time, Seller shall be entitled to invoice the Buyer for the anticipated installation costs, up to $1,250 per day plus expenses, for each of Seller's installations technicians which are on site.
20. ANTI-MONEY LAUNDERING RESTRICTIONS: Seller rejects questionable purchase orders and payments: Except for pre-approved credit arrangements, Seller rejects third-party payments, cashiers' checks, money orders and bank drafts. Seller accepts only checks imprinted with Buyer's name; wire transfers originated in Buyer's account; letters of credit with Buyer as account party; and credit or debit cards in Buyer's name. All payments must be by single instrument in the amount of the invoice, less credits, from banks acceptable to Seller.
21. GOVERNING LAW: These Terms & Conditions and all disputes related to it shall be governed by the laws of the State of Florida, United States of America, without giving effect to its conflict of law rules.
22. JURISDICTION AND VENUE: The parties hereby irrevocably submit to the jurisdiction of the state courts of the State of Florida and to the jurisdiction of the United States District Court for the Middle District of Florida, for the purpose of any suit, action, or other proceeding related to, arising out of or based upon these Terms & Conditions or in any way related to, arising out of or involving sale of Goods hereunder; waive and agree not to assert by way of motion, as a defense, or otherwise, in any such suit, action, or proceeding, any claim that it is not subject personally to the jurisdiction of the above-named courts, that its property is exempt or immune from attachment or execution, that the suit, action, or proceeding is brought in any inconvenient forum, that the venue of the suit, action, or proceeding is improper, or that these Terms & Conditions or the subject matter hereof may not be enforced in or by such court; and waive and agree not to seek any review by any court of any other jurisdiction which may be called upon to grant an enforcement of the judgment of any such Florida state or federal court. The parties hereby consent to service of process by registered mail at the address to which notice is to be given. The exclusive venue for any proceeding under these Terms & Conditions shall be solely in any state court in Pinellas County, Florida, or the Federal District Court for the Middle District of Florida, Tampa Division, sitting in Tampa, Florida. Buyer acknowledges that the prices for Goods offered hereunder are in part dependent on Buyer's consent to jurisdiction in Florida and exclusive venue in Pinellas County, Florida or the Federal District Court for the Middle District of Florida, Tampa Division, sitting in Tampa, Florida, and without Buyer's consent to this jurisdiction and venue provision the prices for the Goods may be higher.
23. GENERAL: Any representation, affirmation of fact and course of dealing, promise or condition in connection therewith or usage of trade not contained herein, shall not be binding on either party. If any provision hereof shall be unenforceable, invalid or void for any reason, such provision shall be automatically voided and shall not be part of these Terms & Conditions and the enforceability or validity of the remaining provisions of these Terms & Conditions shall not be affected thereby.

TO THE EXTENT NOT CONTRARY TO APPLICABLE LAW, THE FOLLOWING SHALL APPLY:
24. Buyer waives any available homestead exemption as well as any and all requirements or rights with regard to notice, demand, presentment.

IMPORTANT NOTICE: *THIS INSTRUMENT PERMITS SELLER TO OBTAIN AND USE YOUR INDIVIDUAL CREDIT HISTORY FOR CREDIT EVALUATION PURPOSES.*

SAFETY & WARNING INFORMATION:

OPERATING YOUR POLYESTER SYSTEM SAFELY

1. Introduction

Any tool, if used improperly, can be dangerous. Safety is ultimately the responsibility of those using the tool. In like manner, safe operation of polyester processes is the responsibility of those who use such processes and those who operate the equipment. This manual outlines procedures to be followed in conducting polyester operations safety. This system has been specifically designed for use of Polyester Resin, Gel-Coat, and Methyl Ethyl Ketone Peroxides (MEKP) applications. Other formulations or blends considered for use in this equipment is strictly prohibited without the expressed consent by Magnum Venus Products Inc. Magnum Venus Products cannot eliminate every danger nor foresee every circumstance that might cause an injury during equipment operation. Some risks, such as the high pressure liquid stream that exits the spray tip, are inherent to the nature of the machine operation and are necessary to the process in order to manufacture the end-product. For this reason, ALL personnel involved in polyester operations should read and understand the Safety Manual. It is very important for the safety of employees involved in the operation that equipment operators, maintenance and supervisory personnel understand the requirements for safe operation. Each user should examine his own operation, develop his own safety program and be assured that his equipment operators follow correct procedures. Magnum Venus Products hopes that this manual is helpful to the user and recommends that the precautions in this manual be included in any such program. Magnum Venus Products recommends this Safety Manual remain on your equipment at all times for your personnel safety. In addition to the manual, Magnum Venus Products recommends that the user consult the regulations established under the Occupational Safety & Health Act (OSHA), particularly the following sections:

1910.94 Pertaining to Ventilation.

1910.106 Pertaining to flammable liquids

1910.107 Pertaining to spray finishing operations, particularly Paragraph (m) Organic Peroxides and Dual Component Coatings.

Other standards and recognized authorities to consult are the National Fire Protection Association (NFPA) bulletins as follows:

NFPA No.33 Chapter 14, Organic Peroxides and Dual Component Materials

NFPA No.63 Dust Explosion Prevention

NFPA No.70 National Electrical Code

NFPA No.77 Static Electricity

NFPA No.91 Blower and Exhaust System

NFPA No.654 Plastics Industry Dust Hazards

Type of Fire Extinguishing equipment recommended: Fire Extinguisher – code ABC, rating number 4a60bc.

Extinguishing Media – Foam, Carbon Dioxide, Dry Chemical, Water Fog.

Copies of the above bulletins are available, at a nominal charge from:

National Fire Protection Association
470 Atlantic Avenue
Boston, MA 02210

Research Report No.11 of the American Insurance Association deal with “Fire, Explosion and Health Hazards of Organic Peroxides”. It is published by:

American Insurance Association
85 John Street
New York, NY 10038

Local codes and authorities also have standards to be followed in the operation of your spraying equipment. Your insurance carrier will be helpful in answering questions that arise in your development of safe procedures.

1.2 Personal Safety Equipment

Magnum Venus Products recommends the following Personal Safety Equipment for conducting safe operations of the Polyester Systems:

Magnum Venus Products recommends that the user consult the state and local regulations established for all Safety equipment listed.

2.0 Material Safety

2.1 Hazards Associated with Laminating Operations

The major hazards which should be guarded against in polyester laminating operations are those associated with:

1. The flammability and explosion dangers of the catalyst normally used – Methyl Ethyl Ketone Peroxide (MEKP).

2. The flammability dangers of clean-up solvents sometimes used (Magnum Venus Products recommends that clean-up solvents be non-flammable), and of resin diluents used, such as styrene.

3. The flammability dangers of catalyst diluents, if used. (Magnum Venus Products recommends that catalyst not be diluted.

4. The flammability dangers of the uncured liquid resins used.

5. The combustibility dangers of the cured laminate, accumulations of over spray, and laminate sandings.

6. The toxicity dangers of all the chemicals used in laminating operations with respect to ingestion, inhalation and skin and eye hazards.

2.2 Catalyst (Methyl Ethyl Ketone Peroxide)

MEKP is among the more hazardous materials found in commercial channels. The safe handling of the "unstable (reactive)" chemicals presents a definite challenge to the plastics industry. The highly reactive property which makes MEKP valuable to the plastics industry in producing the curing reaction of polyester resins also produces the hazards which require great care and caution in its storage, transportation, handling, processing and disposal. MEKP is a single chemical. Various polymeric forms may exist which are more or less hazardous with respect to each other. These differences may arise not only from different molecular structures (all are, nevertheless, called "MEKP") and from possible trace impurities left from the manufacture of the chemicals, but may also arise by contamination of MEKP with other materials in its storage or use. Even a small amount of contamination with acetone, for instance, may produce an extremely shock-sensitive and explosive compound.

Contamination with promoters or materials containing promoters, such as laminate sandings, or with any readily oxidizing material, such as brass or iron, will cause exothermic "redox" reactions which can become explosive in nature. Heat applied to MEKP, or heat build-up from contamination reactions can cause it to reach what is called its Self-Accelerating Decomposition Temperature (SADT).

Researchers have reported measuring pressure rates-of-rise well in excess of 100,000 psi per second when certain MEKP's reach their SADT. (For comparison, the highest pressure rate-of-rise listed in NFPA Bulletin NO.68, "Explosion Venting", is 12,000 psi per second for an explosion of 12% acetylene and air. The maximum value listed for a hydrogen explosion is 10,000 psi per second. Some forms of MEKP, if allowed to reach their SADT, will burst even an open topped container. This suggests that it is not possible to design a relief valve to vent this order of magnitude of pressure rate-of-rise. The user should be aware that any closed container, be it a pressure vessel, surge chamber, or pressure accumulator, could explode under certain conditions. There is no engineering substitute for care by the user in handling organic peroxide catalysts. If, at any time, the pressure relieve valve on top of the catalyst tank should vent, the area should be evacuated at once and the fire department called. The venting could be the first indication of a heat, and therefore, pressure build-up that could eventually lead to an explosion. Moreover, if a catalyst tank is sufficiently full when the pressure relief valve vents, some catalyst may spray out, which could cause eye injury. For this reason, and many others, anyone whose job puts them in an area where this vented spray might go, should always wear full eye protection even when laminating operations are not taking place.

Safety in handling MEKP depends to a great extent on employee education, proper safety instructions and safe use of the chemicals and equipment. Workers should be thoroughly informed of the hazards that may result from improper handling of MEKP, especially in regards to contamination, heat, friction and impact. They should be thoroughly instructed regarding the proper action to be taken in the storage, use and disposal of MEKP and other hazardous materials used in the laminating operation. In addition, users should make every effort to:

A. Store MEKP in a cool, dry place in original containers away from direct sunlight and away from other chemicals.

B. Keep MEKP away from heat sparks and open flames.

C. Prevent contamination of MEKP with other materials, including polyester over spray and sandings, polymerization accelerators and promoters, brass, aluminum and non-stainless steels.

D. Never add MEKP to anything that is hot, since explosive decomposition may result.

E. Avoid contact with skin, eyes and clothing. Protective equipment should be worn at all times. During clean-up of spilled MEKP, personal safety equipment, gloves and eye protection must be worn. Firefighting equipment should be at hand and ready.

F. Avoid spillage, which can heat up to the point of self-ignition.

G. Repair any leaks discovered in the catalyst system immediately, and clean up the leaked catalyst at once in accordance with the catalyst manufacturer's instructions.

H. Use only original equipment or equivalent parts from Magnum Venus Products in the catalyst system (i.e.: hoses, fitting, etc.) because a dangerous chemical reaction may result between substituted parts and MEKP.

I. Catalyst accumulated from the purging of hoses or the measurement of fluid output deliveries should never be returned to the supply tank, such catalyst should be diluted with copious quantities of clean water and disposed of in accordance with the catalyst manufacturer's instructions.

The extent to which the user is successful in accomplishing these ends and any additional recommendations by the catalyst manufacturer determines largely the safety that will be present in his operation.

2.3 Clean-Up Solvents and Resin Diluents

WARNING

A hazardous situation may be present in your pressurized fluid system! Hydrocarbon Solvents can cause an explosion when used with aluminum or galvanized components in a closed (pressurized) fluid system (pump, heaters, filters, valves, spray guns, tanks, etc.). The explosion could cause serious injury, death and/or substantial property damage. Cleaning agents, coatings, paints, etc. may contain Halogenated Hydrocarbon Solvents. Some Magnum Venus Products spray equipment includes aluminum or galvanized components and will be affected by Halogenated Hydrocarbon Solvents.

A. There are three key elements to the Halogenated Hydrocarbon (HHC) solvent hazard.

a. The presence of HHC solvents. 1,1,1 – Trichloroethane and Methylene Chloride are the most common of these solvents. However, other HHC solvents are suspect if used; either as part of paint or adhesives formulation, or for clean-up flushing. b. Aluminum or Galvanized Parts. Most handling equipment contains these elements. In contact with these metals, HHC solvents could generate a corrosive reaction of a catalytic nature.

b. Equipment capable of withstanding pressure. When HHC solvent contact aluminum or galvanized parts inside a closed container such as a pump, spray gun, or fluid handling system, the chemical reaction can, over time, result in a build-up of heat and pressure, which can reach explosive proportions.

When all three elements are present, the result can be an extremely violent explosion. The reaction can be sustained with very little aluminum or galvanized metal; any amount of aluminum is too much.

A. The reaction is unpredictable. Prior use of an HHC solvent without incident (corrosion or explosion) does NOT mean that such use is safe. These solvents can be dangerous alone (as a clean-up or flushing agent) or when used as a component or a coating material. There is no known inhibitor that is effective under all circumstances. Furthermore, the mixing of HHC solvents with other materials or solvents, such as MEKP, alcohol, and toluene, may render the inhibitors ineffective.

B. The use of reclaimed solvents is particularly hazardous. Reclaimers may not add any inhibitors. Also, the possible presence of water in reclaimed solvents could feed the reaction.

C. Anodized or other oxide coatings cannot be relied upon to prevent the explosive reaction. Such coatings can be worn, cracked, scratched, or too thin to prevent contact. There is no known way to make oxide coatings or to employ aluminum alloys, which will safely prevent the chemical reaction under all circumstances.

D. Several solvent suppliers have recently begun promoting HHC solvents for use in coating systems. The increasing use of HHC solvents is increasing the risk. Because of their exemption from many State Implementation Plans as Volatile Organic Compounds

(VOC's), their low flammability hazard, and their not being classified as toxic or carcinogenic substances, HHC solvents are very desirable in many respects.

WARNING: **Do not use Halogenated Hydrocarbon solvents in pressurized fluid systems having aluminum or galvanized wetted parts.**

NOTE: **Magnum Venus Products is aware of NO stabilizers available to prevent Halogenated Hydrocarbon solvents from reaction under all conditions with aluminum components in closed fluid system.** ***TAKE IMMEDIATE ACTION…*** **Halogenated Hydrocarbon solvents are dangerous when used with aluminum components in a closed fluid system.**

A. Consult your material supplier to determine whether your solvent or coating contains Halogenated Hydrocarbon Solvents.

B. Magnum Venus Products recommends that you contact your solvent supplier regarding the best non-flammable clean-up solvent with the heat toxicity for your application.

C. If, however, you find it necessary to use flammable solvents, they must be kept in approved, electrically grounded containers.

D. Bulk solvent should be stored in a well-ventilated, separate building, 50 feet away from your main plant.

E. You should allow only enough solvent for one day's use in your laminating area.

F. "NO SMOKING" signs must be posted and observed in all areas of storage or where solvents and other flammable materials are used.

G. Adequate ventilation (as covered in OSHA Section 1910.94 and NFPA No.91) is important wherever solvents are stored or used, to minimize, confine and exhaust the solvent vapors.

H. Solvents should be handled in accordance with OSHA Section 1910.106 and 1910.107.

2.4 Catalyst Diluents

Magnum Venus Products spray-up and gel-coat systems currently produced are designed so that catalyst diluents are not required. Magnum Venus Products, therefore, recommends that diluents not be used. This avoids the possible contamination which could lead to an explosion due to the handling and mixing of MEKP and diluents. In addition, it eliminates any problems from the diluent being contaminated through rust particles in drums, poor quality control on the part of the diluents suppliers, or any other reason. If, however, diluents are absolutely required, contact your catalyst supplier and follow his instructions explicitly. Preferable, the supplier should premix the catalyst to prevent possible "on the job" contamination while mixing.

WARNING

If diluents are not used, it should be remembered that catalyst spillage, gun, hose and packing leaks are potentially more hazardous, since each drop contains a higher concentration of catalyst, and therefore will react quicker with over spray and the leak.

2.5 Cured Laminate, Overspray and Laminate Sandings Accumulation

A. Remove all accumulations of overspray, FRP sandings, etc. from the building as they occur. If this waste is allowed to build up, spillage of catalyst is more likely to start a fire; in addition, the fire would burn hotter and longer.

B. Floor coverings, if used, should be non-combustible.

C. Spilled or leaked catalyst may cause a fire if it comes in contact with an FRP product, over-sprayed chop or resin, FRP sandings or any other material with MEKP.

To prevent this spillage and leakage, you should:

1. Maintain your Magnum Venus Products System. Check the gun several times daily for catalyst and resin packing or valve leaks. REPAIR ALL LEAKS IMMEDIATELY.

2. Never leave the gun hanging over, or lying inside the mold. A catalyst leak in this situation would certainly damage the part, possibly the mold, and may cause a fire.

3. Inspect resin and catalyst hoses daily for wear or stress at the entry and exits of the boom sections and at the hose and fittings. Replace if wear or weakness is evident or suspected.

4. Arrange the hoses and fiberglass roving guides so that the fiberglass strands DO NOT rub against any of the hoses at any point. If allowed to rub, the hose will be cut through, causing a hazardous leakage of material which could increase the danger of fire. Also, the material may spew onto personnel in the area.

2.7 Toxicity of Chemicals

A. Magnum Venus Products recommends that you consult OSHA Sections 1910.94, 1910.106, 1910.107 and NFPA No.33, Chapter 14, and NFPA No.91.

B. Contact your chemical supplier(s) and determine the toxicity of the various chemicals used as well as the best methods to prevent injury, irritation and danger to personnel.

C. Also determine the best methods of first aid treatment for each chemical used in your plant.

2.8 Treatment of Chemical Injuries

Great care should be used in handling the chemicals (resins, catalyst and solvents) used in polyester systems. Such chemicals should be treated as if they hurt your skin and eyes and as if they are poison to your body. For this reason, Magnum Venus Products recommends the use of protective clothing and eye wear in using polyester systems. However, users should be prepared in the event of such an injury. Precautions include:

1. Know precisely what chemicals you are using and obtain information from your chemical supplier on what to do in the event the chemical gets onto your skin or into the eyes, or is swallowed.

2. Keep this information together and easily available so that it may be used by those administering first aid or treating the injured person.

3. Be sure the information from your chemical supplier includes instructions on how to treat any toxic effects the chemicals have.

WARNING

Contact your doctor immediately in the event of any injury and give him the information you have collected. If your information includes first aid instructions, administer first aid immediately while you are contacting your doctor.

Fast treatment of the outer skin and eyes that contact such chemicals generally includes immediate and thorough washing of the exposed skin and immediate and continuous flushing of the eyes with lots of clean water for at least 15 minutes or more. These general instructions of first aid treatment, however, may be incorrect for some chemicals; that is why you must know the chemicals and treatment before an accident occurs. Treatment for swallowing a chemical frequently depends upon the nature of the chemical.

NOTE: **Refer to your System User Manual for complete and detailed operating instructions and service information.**

3.0 Equipment Safety

WARNING

Magnum Venus Products suggests that personal safety equipment such as EYE GOGGLES, GLOVES, EAR PROTECTION, and RESPIRATORS be worn when servicing or operating this equipment. Ear protection should be worn when operating a fiberglass chopper to protect against hearing loss since noise levels can be as high as 116 dB (decibels). This equipment should only be operated or serviced by technically trained personnel!

WARNING

Never place fingers, hands, or any body part near or directly in front of the spray gun fluid tip. The force of the liquid as it exits the spray tip can cause serious injury by shooting liquid through the skin. NEVER LOOK DIRECTLY INTO THE GUN SPRAY TIP OR POINT THE GUN AT OR NEAR ANOTHER PERSON. (TREAT THE GUN AS IF IT WERE A LOADED PISTOL.)

3.1 Emergency Stop Procedures

The following steps should be followed in order to stop the machinery in an emergency situation

1. The ball valve located where the air enters the power head of the resin pump, should be moved to the “OFF” or closed position. To do this, simply rotate the lever on the ball valve 90 degrees. Doing this will cause all the system air to bleed out of the system in a matter of a few seconds, making the system incapable of operating

NOTE: Step 2 is a precautionary step and should be followed whenever the above mentioned ball valve is activated to the stop mode. Failure to do so, can damage the regulators and components on reactivating to the “ON” position.

2. Turn all system regulators to the “OFF” position (counter-clockwise) position

NOTE: Verify that the Catalyst relief line, located on the catalyst manifold, and the resin return line, located on the resin filter, are secured relieving catalyst and resin fluid pressure.

3. Catalyst pressure in the catalyst pump can be eliminated by rotating the ball valve on the catalyst manifold 90 degrees to the “open” or “on” position.

Note: The “open” or “on” position is when the ball valve handle is parallel (in line) with the ball valve body. The “closed” or “off” position is when the ball valve handle is perpendicular (across) the ball valve body.

4. Resin pressure in the resin pump can be eliminated by rotating the ball valve on the resin filter 90 degrees to the “open” or “on” position. Place a container under the ball valve to catch any resin that is ejected out of the valve.

3.2 Grounding

Grounding an object means providing an adequate path for the flow of the electrical charge from the object to the ground. An adequate path is one that permits a charge to flow from the object fast enough that it will not accumulate to the extent that a spark can be formed. It is not possible to define exactly what will be an adequate path under all conditions since it depends on many variables. In any event, the grounding means should have the lowest possible electrical resistance. Grounding straps should be installed on all loose conductive objects in the spraying area. This includes material containers and equipment. Magnum Venus Products recommends grounding straps be made of AWG No.18 stranded wire as a minimum and the larger wire be used where possible. NFPA Bulletin No77 states that the electrical resistance of such a leakage path may be as low as 1 meg ohm (10 ohms) but that resistance as high as 10,000 meg ohms will produce an adequate leakage path in some cases. Whenever flammable or combustible liquids are transferred from one container to another, or from one container to the equipment, both containers or container and equipment shall be effectively bonded and grounded to dissipate static electricity. For further information, see **National Fire Protection Association** (NFPA) 77, titled "Recommended Practice on Static Electrical". Refer especially to section 7-7 titled "Spray Application of Flammable and Combustible Materials". Check with local codes and authorities for other specific standards that might apply to your application. NEVER USE HARD MATERIALS SUCH AS WIRE, PINS, ETC., TO CLEAR A PLUGGED GUN. HARD MATERIALS CAN CAUSE PERMANENT DAMAGE. DAB WITH A BRISTLE BRUSH, BLOW BACKWARDS WITH AIR UNTIL CLEAR WHILE WEARING A PROTECTIVE EYE SHIELD. REPEAT AS MANY TIMES AS NECESSARY. DO NOT PERFORM ANY MAINTENANCE OR REPAIRS UNTIL YOU HAVE FOLLOWED THE PRECAUTIONS STATED ABOVE. IF YOU, AS AN EQUIPMENT OPERATOR OR SUPERVISOR, DO NOT FEEL THAT YOU HAVE BEEN ADEQUATELY TRAINED OR INSTRUCTED AND THAT YOU LACK THE TECHNICAL KNOWLEDGE TO OPERATE OR PERFORM MAINTENANCE ON A PIECE OF MAGNUM VENUS PRODUCTS EQUIPMENT, PLEASE CALL MAGNUM VENUS PRODUCTS BEFORE OPERATING OR PERFORMING MAINTENANCE ON THE EQUIPMENT. IF YOU HAVE ANY QUESTIONS REGARDING THE ABOVE PRECAUTIONS OR ANY SERVICE OR OPERATION PRECEDURES, CALL YOUR MAGNUM VENUS PRODUCTS DISTRIBUTOR OR MAGNUM VENUS PRODUCTS.

NOTICE: All statements, information and data given herein are believed to be accurate and reliable but are presented without guaranty, warranty or responsibility of any kind express or implied. The user should not assume that all safety measures are indicated or that other measures are not required.

DANGER: Contaminated catalyst may cause Fire or Explosion. Before working on the catalyst pump or catalyst accumulator, wash hands and tools thoroughly. Be sure work area is free of dirt, grease or resin. Clean catalyst system components with clean water only.

DANGER: Eye, skin and respiration hazard. The Catalyst, MEKP, may cause blindness, skin irritation or breathing difficulty. Keep hands away from face. Keep food and drink away from work area.

WARNING: Please refer to your catalyst manufacturer's safety information regarding the safe handling and storage of catalyst. Wear appropriate safety equipment as recommended.

Introduction:

This manual covers both the 4” and 5-5/8” stroke length Powerheads (VPH-5000 & MPH-5000). It also covers the VPH-5000-DUO 5” Powerhead Assembly for the DUO units and the VPH-5000-DHV for the Dual High Volume Unit. This manual also covers the 5” Powerhead assembly for the Ultra Proportioner UPPH-5000. The process will be the same for rebuilding the UPPH-5000 Powerhead only few the parts will be different – please note the correct numbers on the UPPH-5000 parts drawing.

NOTE: It is important to have the correct parts drawing for the Powerhead you are working on. This will assist in identifying the correct part numbers for the assembly being rebuilt. The procedures will be the same between the different configurations but some parts will differ.

The reassembly will require the use of removable Loctite® or equivalent thread lock compound, Lithium grease (08465) and SUPERLUBE O-ring lubricant.

NOTE: Before starting any service work, release fluid and air pressure from system. Remove the two air lines from the air motor. In some cases the Powerhead assembly does not have to be completely removed from the system for service work.

Please read the manual carefully. Follow the steps in the order given, otherwise you may damage the equipment or injure yourself.

During Disassembly . . .
As you disassemble the equipment, lay out the components in the correct order and direction, and have all component drawings available to refer to prior to disassembly.

This will help you to reassemble them.

Valve Block Disassembly:

1. Remove the two Hex Head screws (F-HB-04C-56-SS) from the front of the Muffler (refer to drawing) and remove the Muffler.

2. Remove the four Socket Head Cap Screws (F-CS-04C-40-SS) from the Valve Block.

NOTE: While removing the Valve Block from the End Cap do not lose the O-rings.

3. Unscrew the Poly Fitting nut from the Male Elbow (MPH-2539) located on the side of the Valve Block. Remove the two End Caps (MPH-2521) from the Valve Block.

4. Remove the Pipe Plug (PF-AP-04-SS) from the Lower Valve Block (MPH-5001). Use a 7/16" Socket or Nut driver on either of the two Valve Pistons (MPH-2517) and rotate until the hole in the Valve Poppet (MPH-5008) aligns with the pipe plug port in the lower Valve Block.

5. Insert a 7/32" Hex wrench through the pipe plug port and into the hole in the Valve Poppet (MPH-5008). *(See Figure 1)* Unscrew either of the two Valve Pistons (MPH-2517) and remove. Repeat removal of the second Valve Piston.

Figure 1:
Use a 7/16" Socket or Nut driver on the top of the valve piston and rotate to align the round hole in the poppet with the tapped hole in the block. Insert hex wrench into the poppet and unscrew the valve piston from the valve rod. Repeat process for second valve piston.

NOTE: The hole diameter in the Valve Poppet is .2685 (6.81mm) if a 7/32" hex wrench is not available.

6. Remove the Button Head Cap Screw (F-BHCS-04C-16-SS) from the front of the Lower Valve Block (MPH-5001). Twist and pull the Upper Valve Block (refer to drawing) from the Lower Valve Block (MPH-5001). Remove the Valve Rod assembly from the Valve Block.

7. Remove the two Cap Screws (F-CS-04C-08-SS) from each of the two Valve Exhausts (MPH-5009). Pull both of the Valve Exhausts from the Valve Blocks. Remove the Diaphragm (MPH-5010) from the Lower Valve Block (MPH-5001). *(See Figure 2)*

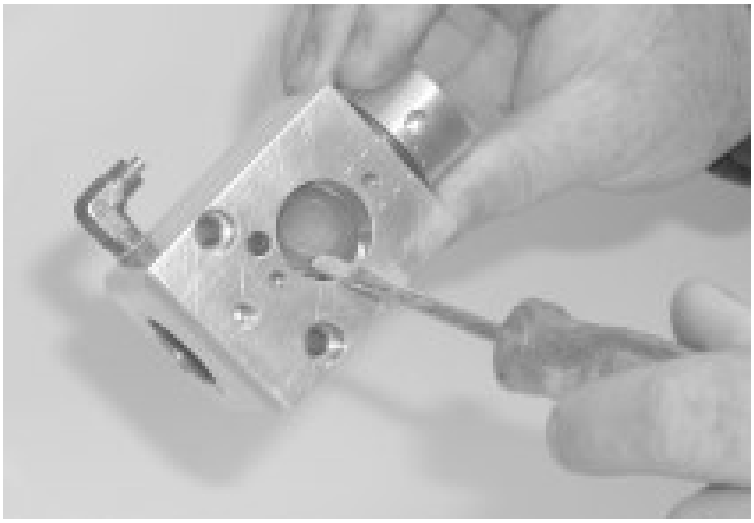

Figure 2
Lift the inner edge of the diaphragm up and remove from block. Coat the diaphragm bore with lithium grease.

NOTE: Avoid putting any scratches in the Valve Blocks. To remove the Diaphragm use a small screwdriver and push the center riser on the Diaphragm to one side and slide out.

Repeat the removal of the Diaphragm from the Upper Valve Block (refer to drawing).

8. Remove each O-ring and replace with new. Coat every new O-ring with lithium grease. Coat the diaphragm bore and both valve piston bores with lithium grease before assembling. Use a wire brush to clean the valve rod threads of any dry thread lock compound.

Valve Block Reassembly:

NOTE: Removable thread lock compound will be required for reassembly. If either one of the two Valve Rods unscrewed from the Valve Poppet (MPH-5008) during disassembly, put one to two drops of removable thread lock compound on threads and assemble.

1. Set the Valve Rod assembly into the Lower Valve Block (MPH-5001).

NOTE: The MPH-5000 has a long and short Valve Rod, insert the short Valve Rod (MPH-2519) into the Lower Valve Block. Rotate the Valve Rod so the hole in the Valve Poppet aligns with the Pipe Plug (PF-AP-04-SS) bore. Insert 7/32" hex wrench through the pipe plug bore and into the hole in the Valve Poppet to hold Valve Rod assembly in place.

2. Slide the Upper Valve Block (refer to drawing) into the Lower Valve Block (MPH-5001) and align properly. Screw the Button Head Cap Screw (F-BHCS-04C-16-SS) into the Lower Valve Block.

3. Use one to two drops of removable thread lock compound in the female threads of the Valve Pistons (MPH-2517). *(See Figure 3)* Shake off any excess thread lock compound and screw onto either Valve Rod end. Repeat for process for the second Valve Piston and remove hex wrench from Valve Block.

4. Use either Teflon tape or Pipe compound on the Pipe Plug (PF-AP-04-SS) threads and screw into the Lower Valve Block.

Figure 3
Use only one to two drops of thread lock compound in valve piston threads.

5. Insert the Diaphragms (MPH-5010) into the Upper and Lower Valve Blocks with the outside leading edge of the Diaphragms facing out. Push the Diaphragms all the way down into the Valve Block bore.

6. Install the Valve Exhausts (MPH-5009) onto the Upper and Lower Valve Blocks. One side of the Valve Exhausts has three holes, one of the holes must line up with the machined holes in the Upper and Lower Valve Block. *(See Figure 4)*

Figure 4:
Do not block the hole in the valve block when installing the valve exhaust.

7. Install the two Socket Head Cap Screws (FCS- 04C-08-SS) into each of the two Valve Exhausts and snug tight.

8. Install Valve End Caps (MPH-2521) into the Upper and Lower Valve Blocks and lightly snug tight.

Air Cylinder Disassembly:

NOTE: Refer to the drawing for part numbers

1. Remove all items (couplings, connectors and rod ends) from the Piston Rod end.

NOTE: The following procedures assume that the Powerhead is oriented so that the Piston Rod is pointing down. Powerheads that have been removed from their units they can be disassembled from either orientation (Piston Rod pointing up or down).

2. Remove the five (5) Hex Nuts (F-HN-06F) from the Tie Rods.

3. Pull the Upper End Cap off the Cylinder.

CAUTION: Use care not to scratch the inside of the Cylinder when removing the Piston.

4. Slide the Piston Rod from the Lower End Cap.

5. Using a pair of snap ring pliers, remove the Snap Ring from the Piston Rod Bushing.

6. Remove the Piston Rod Bushing from the Lower End Cap.

7. Replace all O-rings and coat with lithium grease (08465). Coat the inside of the Cylinder, Piston Rod and Piston Rod Bushing with lithium grease (08465).

Pilot Valve Rebuild:

NOTE: The two Pilot Valves in the Upper and Lower End Caps are the same.

1. Remove the Inlet Spring Housing (MPH-2541) from the Upper End Cap (refer to drawing). Remove Spring (MPH-2533) with Inlet Rod (MPH-2540). Turn the End Cap over and a small Spring (MPH-2526) will fall out. *(See Figure 5)*

2. Replace O-ring (O-B-012) on the Spring Housing (MPH-2541) and the O-ring (O-U-006) on the Inlet Rod (MPH-2540). Coat O-rings and Springs with a light coat of SUPERLUBE grease (SUPERLUBE). Set Spring (MPH-2533) into the Spring Housing (MPH-2541) with Inlet Rod (MPH-2540) facing up.

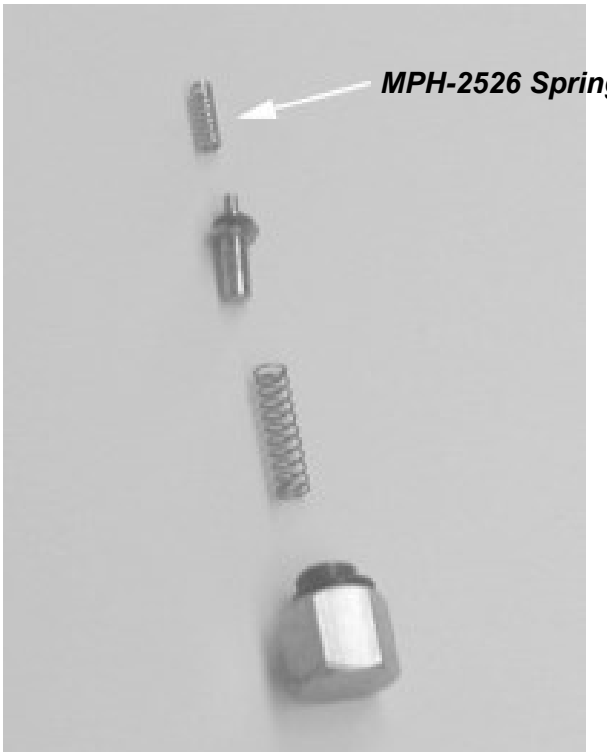

Figure 5:
The MPH-2526 spring will be installed from the bottom of the end cap.

NOTE: Do not install the small Spring (MPH-2526) at this time. Screw the Inlet Spring Housing (MPH-2541) into the Upper End Cap.

3. Remove the Stem Seal (MPH-2511-01) from the bottom of the Upper End Cap. Remove the Seal Guide (MPH-2512) with the Spring (MPH-2528). Replace O-ring (O-B-012) and lightly coat O-ring and Stem with SUPERLUBE grease (SUPERLUBE). Drop the small Spring (MPH-2526) into the stem seal bore, the Spring should center itself onto the end of the Inlet Rod (MPH-2540). *(See Figure 6)*

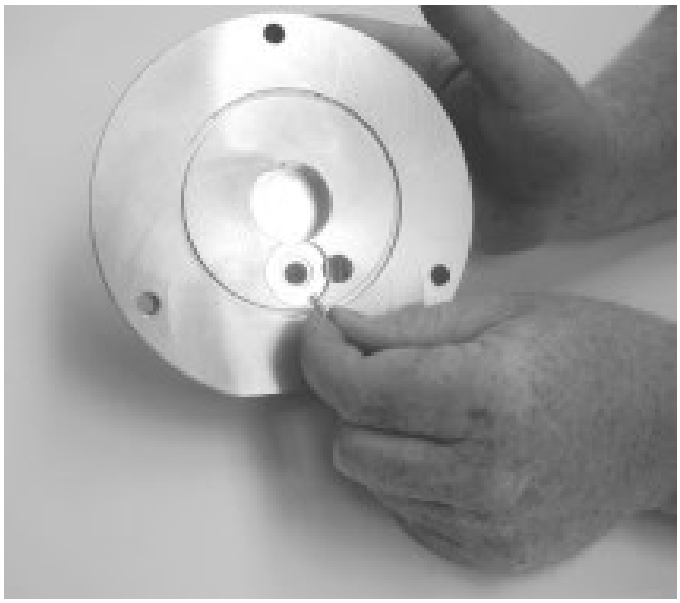

Figure 6:
Install the MPH-2526 after the spring housing (MPH-2541), spring (MPH-2533) and inlet rod (MPH-2540) has been installed in the top of the end cap.

4. Insert the Spring (MPH-2528) with the Seal Guide (MPH-2512) into the end cap. Set the small end of the Seal Guide (MPH-2512) onto the Spring (MPH-2528). Set a new O-ring (O-B-008) on top of the Seal Guide. Screw the Stem Seal (MPH-2511-01) with Valve Stem (MPH-2513) into the Upper End Cap. *(See Figure 7)*

5. Repeat the Pilot Valve rebuild on the Lower End Cap.

Figure 7:

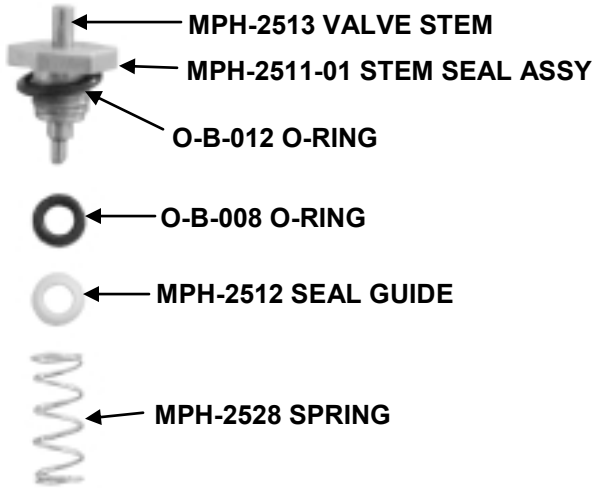

Air Cylinder Reassembly:

1. Install the Piston Rod Bushing into the Lower End Cap and secure with Snap Ring (refer to drawing for part numbers).

NOTE: The following procedures assume that the Powerhead is oriented so that the Piston Rod is pointing down. Powerheads that have been removed from their units they can be disassembled from either orientation (Piston Rod pointing up or down).

2. Insert the Piston Rod through the Piston Rod Bushing.

3. Slide the Cylinder over the Piston (MPH-5006) down onto the Lower End Cap O-ring (O-B-415).

CAUTION: Use care not to scratch the inside of the Cylinder during installation.

4. Set the Upper End Cap onto the Cylinder with the Valve Block flats facing the same direction. Screw the Hex Nuts (F-HN-06F) onto the Tie Rods and snug the Hex Nuts.

5. Install the appropriate connector, rod end and clips to the end of the Piston Rod.

6. Position the O-rings on the back of the Pilot Valve assembly.

7. Mount the Pilot Valve assembly to the side of the Powerhead using the four Cap Screws (F-CS-04C-40). Be sure that the Pilot Valve is mounted with the correct end up.

8. Install the Muffler to the Pilot Valve using the two Hex Bolts (F-HB-04C-56)

9. Connect the pilot air hose and regulated air hose to air motor.

Parts Drawings:

MPH-5000	5” Powerhead Assembly – 5-5/8 Stroke
VPH-5000	5” Powerhead Assembly
MPH-SB-XL	Shift Block for MPH-5000, 7000
VPH-SB-XL	Shift Block for VPH-5000, 7000, 10000
MPH-5000-SK	Seal Kit for 7” Power Head
MPH-SB-XL-SK	Seal Kit for Shift Block
VPH-5000-DHV	5” Powerhead Assembly – Dual HV Unit
VPH-5000-DUO	5” Powerhead Assembly – DUO units
UPPH-5000	5” Powerhead Assembly – Ultra Proportioner

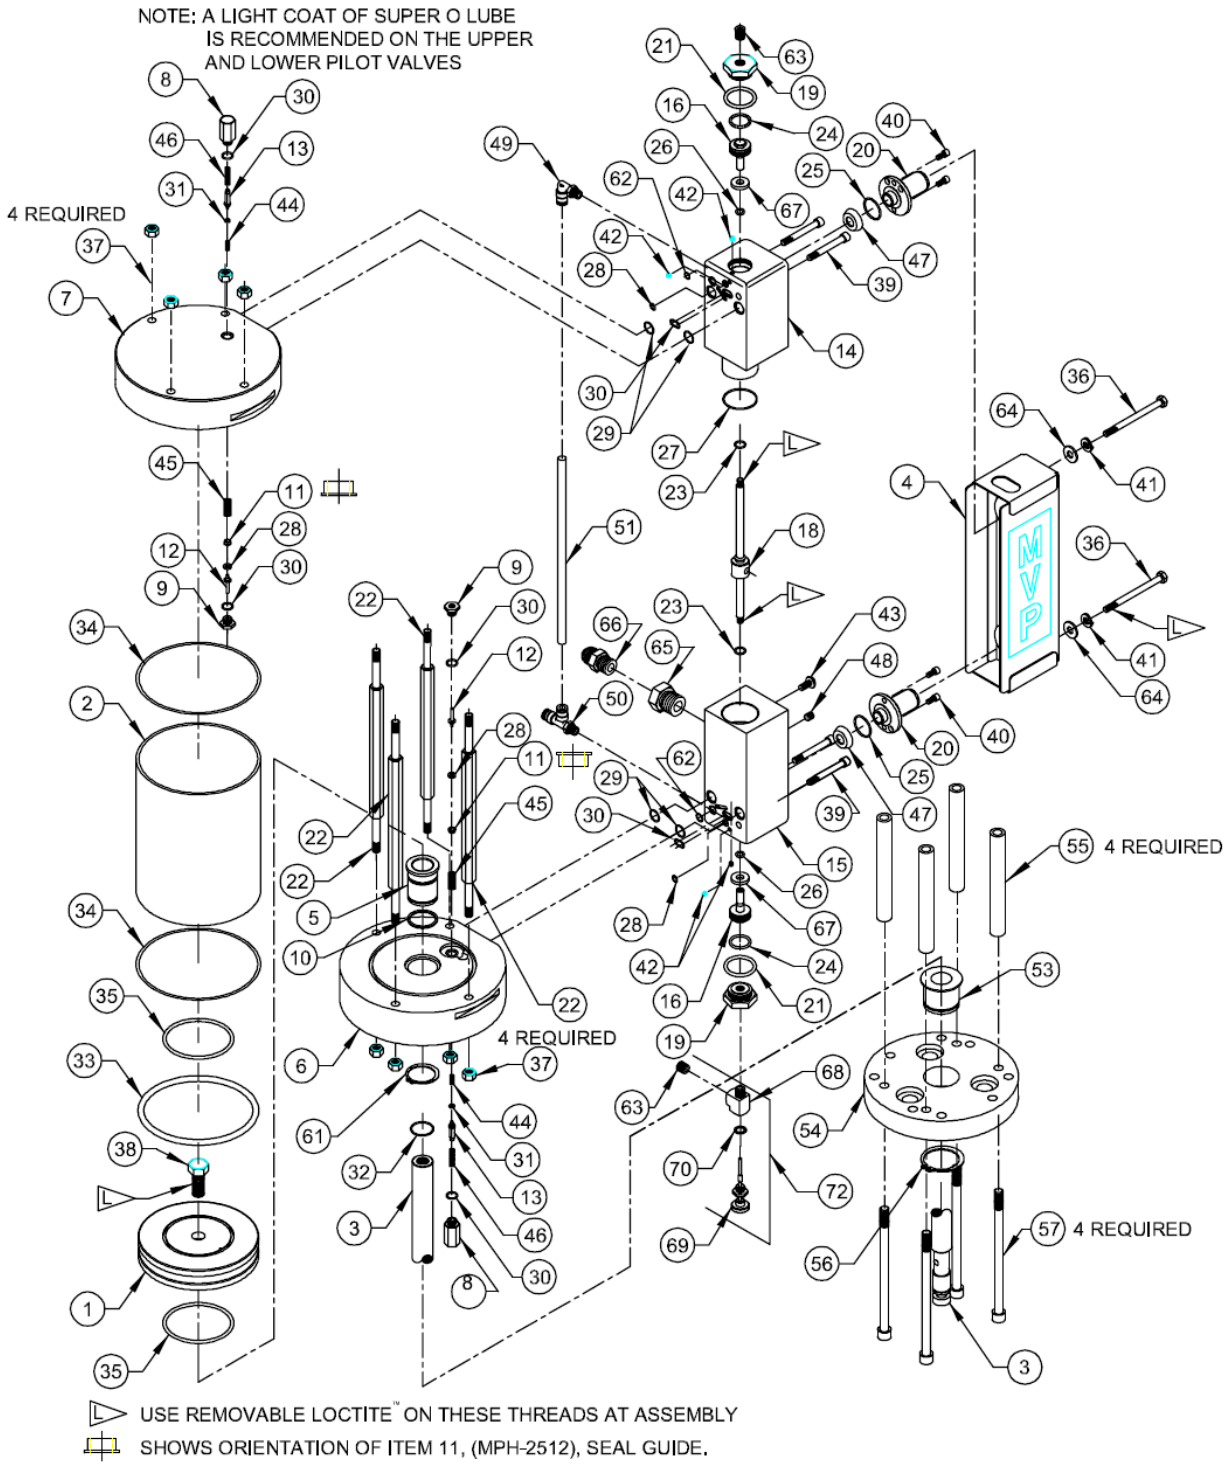
NOTE: A LIGHT COAT OF SUPER O LUBE IS RECOMMENDED ON THE UPPER AND LOWER PILOT VALVES
4 REQUIRED
4 REQUIRED
4 REQUIRED
4 REQUIRED
USE REMOVABLE LOCTITE™ ON THESE THREADS AT ASSEMBLY
SHOWS ORIENTATION OF ITEM 11, (MPH-2512), SEAL GUIDE.

MAGNUM VENUS PLASTECH

Assembly - 5" Power Head 5 5/8" Stroke	MPH-5000

REV. Q = ITEM 51 WAS 01417 11/09/07 BT2
R = ITEM 38 WAS F-HBFT-08C-20-GR5 05/08/09 BT2
S = ADDED SUPER O LUBE NOTE FOR PILOT VALVES 05/25/11 BT2
T = CORRECTED ITEMS 21 AND 24 ON ILLUSTRATION 07/29/12 BT2

Assembly - 5" Power Head 5 5/8" Stroke MPH-5000

PARTS LIST

ITEM	PART NO.	QTY	DESCRIPTION
1	MPH-5006	1	PISTON - 5" PUMP
2	MPH-5005	1	CYLINDER - 5" PUMP
3	MPH-3253	1	PISTON ROD
4	MPH-5011-01	1	MUFFLER ASSY - 5 5/8" STROKE PUMP
5	VPH-4254	1	PISTON ROD BUSHING
6	MPH-5004	1	LOWER ENDCAP - 5" PUMP
7	MPH-5003	1	UPPER ENDCAP - 5" PUMP
8	MPH-2541	2	INLET SPRING HOUSING - PILOT VALVE
9	MPH-2511-01	2	ASSY - STEM SEAL
* 10	O-B-121	1	O-RING
11	MPH-2512	2	SEAL GUIDE
12	MPH-2513	2	VALVE STEM - PILOT VALVE
13	MPH-2540	2	INLET ROD - PILOT VALVE
14	MPH-5002	1	UPPER VALVE BLOCK - 5 5/8" STROKE PUMP
15	MPH-5001	1	LOWER VALVE BLOCK
16	MPH-2517	2	VALVE PISTON
18	MPH-5012	1	VALVE POPPET
19	MPH-2521	2	VALVE END CAP
20	MPH-5009	2	VALVE EXHAUST
* 21	O-B-019	2	O-RING
22	MPH-5007	4	TIE ROD 5 5/8" STROKE PUMP
* 23	O-U-206-90	2	O-RING
* 24	O-B-116	2	O-RING
* 25	O-B-026	2	O-RING
* 26	O-D-010-90	2	O-RING
* 27	O-B-125	1	O-RING
* 28	O-B-008	4	O-RING
* 29	O-B-014	4	O-RING
* 30	O-B-012	6	O-RING
* 31	O-U-006	2	O-RING
* 32	O-B-118	1	O-RING
* 33	O-B-425	1	O-RING
* 34	O-B-159	2	O-RING
* 35	O-B-415	2	O-RING
36	F-HB-04C-56-SS	2	HEX BOLT
37	F-HN-06F	8	HEX NUT
38	F-HB-08F-20-GR5	1	HEX BOLT
39	F-CS-04C-40-SS	4	SOCKET HEAD CAP SCREW
40	F-CS-04C-08-SS	4	SOCKET HEAD CAP SCREW
41	F-SW-04-SS	2	LOCK WASHER
42	F-SS-832-02-SS	4	CUP POINT SET SCREW
43	F-BHCS-04C-16-SS	1	BUTTON HEAD CAP SCREW
44	MPH-2526	2	SPRING
45	MPH-2528	2	SPRING
46	MPH-2533	2	SPRING
* 47	MPH-5010	2	DIAPHRAGM
48	PF-AP-04-SS	1	PIPE PLUG
49	MPH-2539	1	PUSH POLY FITTING - MALE ELBOW
50	MPH-2538	1	PUSH POLY FITTING - MALE TEE
51	MS-2052-1	.70ft	Ø1/4 x 8-3/8 POLY TUBING
53	MPH-3256	1	BUSHING - MAGNUM BASE
54	MPH-3257	1	MODIFIED MP BASE
55	MPH-3258	4	INTERMEDIATE SPACER
56	MPH-2536	1	EXT SNAP RING
57	F-CS-06C-100	4	SOCKET HEAD CAP SCREW
61	MPH-3261	1	SNAP - RING
* 62	O-B-011	2	O-RING
63	PF-AP-02-SS	2	PIPE PLUG
64	F-FW-04	2	FLAT WASHER
65	PF-RB-08-06	1	PIPE BUSHING
66	PF-HN-06-06S	1	ADAPTER
67	MPH-3262	2	PISTON STOP

PARTS LIST

ITEM	PART NO.	QTY	DESCRIPTION
68	00276	1	TEE FITTING
69	MPH-2546-01	1	VALVE STEM ASSY
70	MPH-2545	1	SEAL
71	DONOTOILAIRMOTOR	1	DO NOT OIL DECAL (NOT SHOWN)

OPTIONAL PARTS AND ASSEMBLIES PARTS LIST

ITEM	PART NO.	QTY	DESCRIPTION
72	MPH-MPH-2542	1	RESET BUTTON ASSY
	MPH-SB-XL	1	SHIFT BLOCK ASSY

REPAIR KITS

	PART NO.	DESCRIPTION
*	MPH-5000-SK	SEAL KIT

FIGURE 1-1

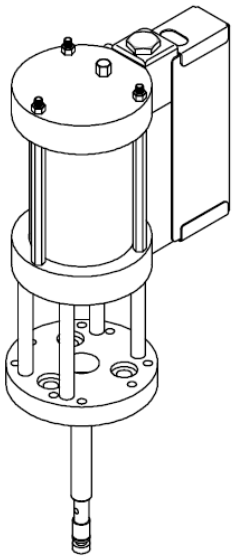

* COMPONENTS INCLUDED WITH SEAL KIT.

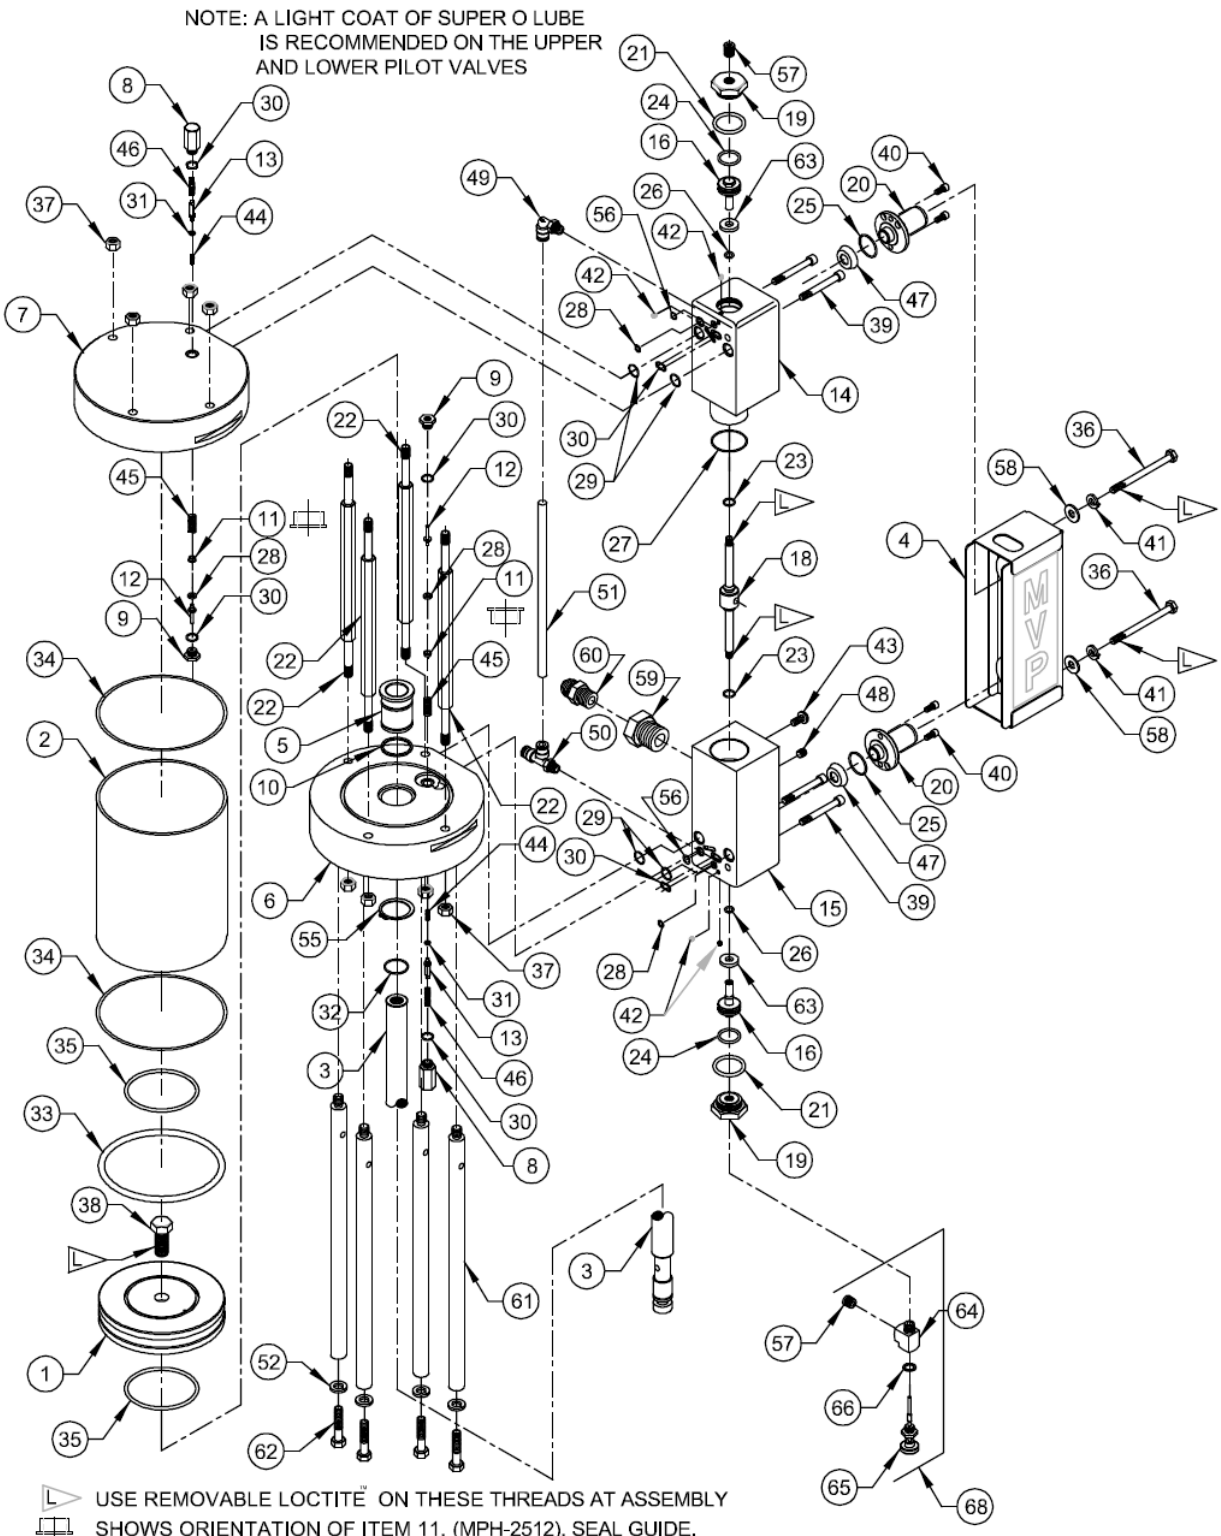
NOTE: A LIGHT COAT OF SUPER O LUBE IS RECOMMENDED ON THE UPPER AND LOWER PILOT VALVES
USE REMOVABLE LOCTITE™ ON THESE THREADS AT ASSEMBLY
SHOWS ORIENTATION OF ITEM 11, (MPH-2512), SEAL GUIDE.

MAGNUM VENUS PLASTECH

Assembly - 5" Power Head 4" Stroke — VPH-5000

REV O = PLACED ITEM 11 INTO THE PROPER POSITION 01/24/06 BT2
P = ITEM 51 WAS 01417 11/09/07 BT2
Q = ITEM 38 WAS F-HBFT-08C-20-GR5 05/08/09 BT2
R = ADDED SUPER O LUBE NOTE FOR PILOT VALVES 05/25/11 BT2

Assembly - 5" Power Head 4" Stroke VPH-5000

PARTS LIST

ITEM	PART NO.	QTY	DESCRIPTION
1	MPH-5006	1	PISTON - 5" PUMP
2	VPH-5002	1	CYLINDER - 5" x 4" STROKE PUMP
3	VPH-4259	1	PISTON ROD
4	VPH-5004-01	1	MUFFLER ASSY - 4" STROKE PUMP
5	VPH-4254	1	PISTON ROD BUSHING
6	MPH-5004	1	LOWER ENDCAP - 5" PUMP
7	MPH-5003	1	UPPER ENDCAP - 5" PUMP
8	MPH-2541	2	INLET SPRING HOUSING - PILOT VALVE
9	MPH-2511-01	2	ASSY - STEM SEAL
* 10	O-B-121	1	O-RING
11	MPH-2512	2	SEAL GUIDE
12	MPH-2513	2	VALVE STEM - PILOT VALVE
13	MPH-2540	2	INLET ROD - PILOT VALVE
14	VPH-5001	1	UPPER VALVE BLOCK - 4" STROKE PUMP
15	MPH-5001	1	LOWER VALVE BLOCK
16	MPH-2517	2	VALVE PISTON
18	VPH-5005	1	VALVE POPPET
19	MPH-2521	2	VALVE END CAP
20	MPH-5009	2	VALVE EXHAUST
* 21	O-B-019	2	O-RING
22	VPH-5003	4	TIE ROD 4" STROKE PUMP
* 23	O-U-206-90	2	O-RING
* 24	O-B-116	2	O-RING
* 25	O-B-026	2	O-RING
* 26	O-D-010-90	2	O-RING
* 27	O-B-125	1	O-RING
* 28	O-B-008	4	O-RING
* 29	O-B-O14	4	O-RING
* 30	O-B-012	6	O-RING
* 31	O-U-006	2	O-RING
* 32	O-B-118	1	O-RING
* 33	O-B-425	1	O-RING
* 34	O-B-159	2	O-RING
* 35	O-B-415	2	O-RING
36	F-HB-04C-56-SS	2	HEX HEAD CAP SCREW
37	F-HN-06F	8	HEX NUT
38	F-HB-08F-20-GR5	1	HEX HEAD CAP SCREW
39	F-CS-04C-40-SS	4	SOCKET HEAD CAP SCREW
40	F-CS-04C-08-SS	4	SOCKET HEAD CAP SCREW
41	F-SW-04-SS	2	LOCK WASHER
42	F-SS-832-02-SS	4	CUP POINT SET SCREW
43	F-BHCS-04C-16-SS	1	BUTTON HEAD CAP SCREW
44	MPH-2526	2	SPRING
45	MPH-2528	2	SPRING
46	MPH-2533	2	SPRING
* 47	MPH-5010	2	DIAPHRAGM
48	PF-AP-04-SS	1	PIPE PLUG
49	MPH-2539	1	PUSH POLY FITTING - MALE ELBOW
50	MPH-2538	1	PUSH POLY FITTING - MALE TEE
51	MS-2052-1	.56ft	Ø1/4 x 6-3/4 POLY TUBING
52	F-SW-06	4	LOCK WASHER
55	MPH-3261	1	SNAP - RING
* 56	O-B-011	2	O-RING
57	PF-AP-02-SS	2	PIPE PLUG
58	F-FW-04	2	FLAT WASHER
59	PF-RB-08-06	1	PIPE BUSHING
60	PF-HN-06-06S	1	ADAPTER
61	2104-4-1	4	TIE ROD
62	F-HB-06C-24-GR8	4	GRADE 8 HEX CAP SCREW
63	MPH-3262	2	PISTON STOP

PARTS LIST

ITEM	PART NO.	QTY	DESCRIPTION
64	00276	1	TEE FITTING
65	MPH-2546-01	1	VALVE STEM ASSY
66	MPH-2545	1	SEAL
67	DONOTOILAIRMOTOR	1	DO NOT OIL DECAL (NOT SHOWN)

OPTIONAL PARTS AND ASSEMBLIES

PARTS LIST

ITEM	PART NO.	QTY	DESCRIPTION
68	MPH-2542	1	RESET BUTTON ASSY
	VPH-SB-XL	1	SHIFT BLOCK ASSY

REPAIR KITS

	PART NO.	DESCRIPTION
*	MPH-5000-SK	SEAL KIT

FIGURE 1-1

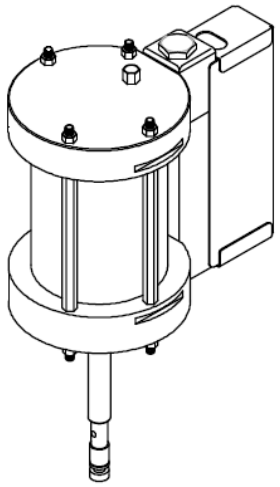

* COMPONENTS INCLUDED WITH SEAL KIT.

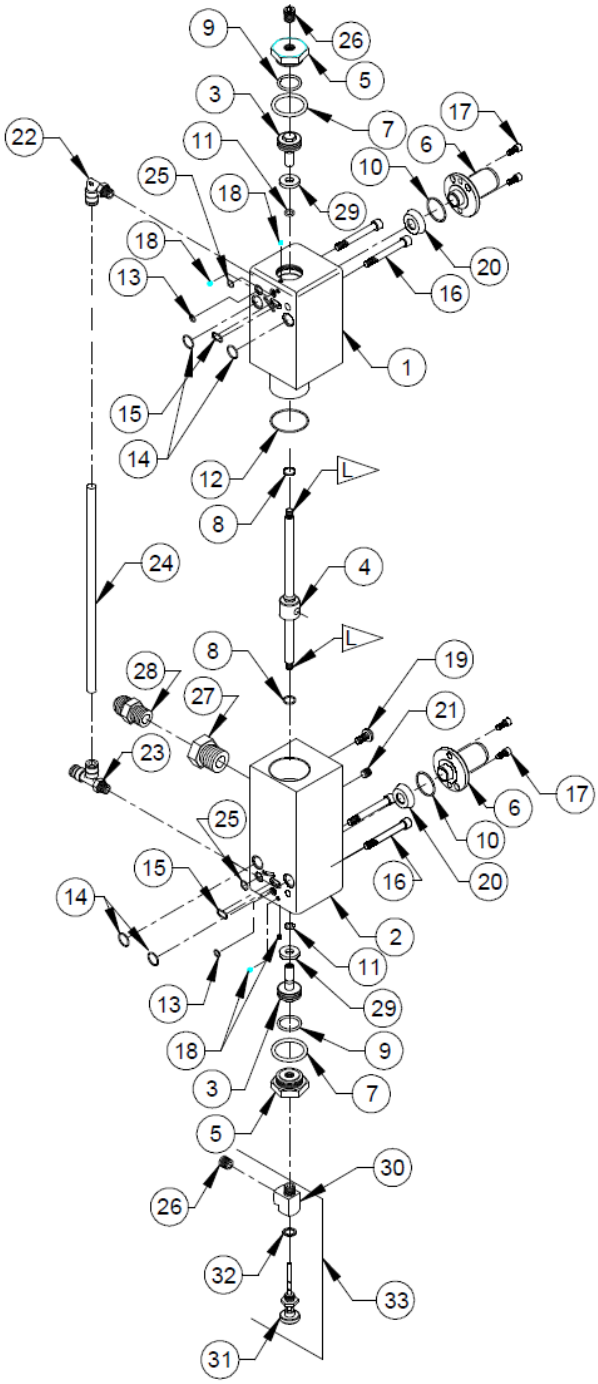

L USE REMOVABLE LOCTITE™ ON THESE THREADS AT ASSEMBLY

MAGNUM VENUS PRODUCTS

Shift Block for MPH-5000,7000	MPH-SB-XL

REV. 10/14/05 BT2
REV. A - ADDED REPAIR KIT 06/04/07 BT2

Shift Block for MPH-5000,7000
PARTS LIST

ITEM	PART NO.	QTY	DESCRIPTION
1	MPH-5002	1	UPPER VALVE BLOCK
2	MPH-5001	1	LOWER VALVE BLOCK
3	MPH-2517	2	VALVE PISTON
4	MPH-5012	1	VALVE POPPET
5	MPH-2521	2	VALVE END CAP
6	MPH-5009	2	VALVE EXHAUST
* 7	O-B-019	2	O-RING
* 8	O-U-206-90	2	O-RING
* 9	O-B-116	2	O-RING
* 10	O-B-026	2	O-RING
* 11	O-D-010-90	2	O-RING
* 12	O-B-125	1	O-RING
* 13	O-B-008	2	O-RING
* 14	O-B-014	4	O-RING
* 15	O-B-012	2	O-RING
16	F-CS-04C-40-SS	4	SOCKET HEAD CAP SCREW
17	F-CS-04C-08-SS	4	SOCKET HEAD CAP SCREW
18	F-SS-832-02-SS	4	SET SCREW
19	F-BHCS-04C-16-SS	1	BUTTON HEAD CAP SCREW
* 20	MPH-5010	2	DIAPHRAGM
21	PF-AP-04-SS	1	PIPE PLUG
22	MPH-2539	1	PUSH POLY FITTING - MALE ELBOW
23	MPH-2538	1	PUSH POLY FITTING - MALE TEE
24	MS-2052-1	1	Ø1/4 X 8-3/8 TUBING
* 25	O-B-011	2	O-RING
26	PF-AP-02-SS	2	PIPE PLUG
27	PF-RB-08-06	1	PIPE BUSHING
28	PF-HN-06-06S	1	HEX NIPPLE
29	MPH-3262	2	PISTON STOP
30	PF-ST-02-BR	1	TEE FITTING
31	MPH-2546-01	1	VAVLE STEM ASSY
32	MPH-2545	1	SEAL

REPAIR KITS

PART NO.	DESCRIPTION
* MPH-SB-XL-SK	SEAL KIT

OPTIONAL PARTS AND ASSEMBLIES
PARTS LIST

ITEM	PART NO.	QTY	DESCRIPTION
33	MPH-2542	1	RESET BUTTON ASSY

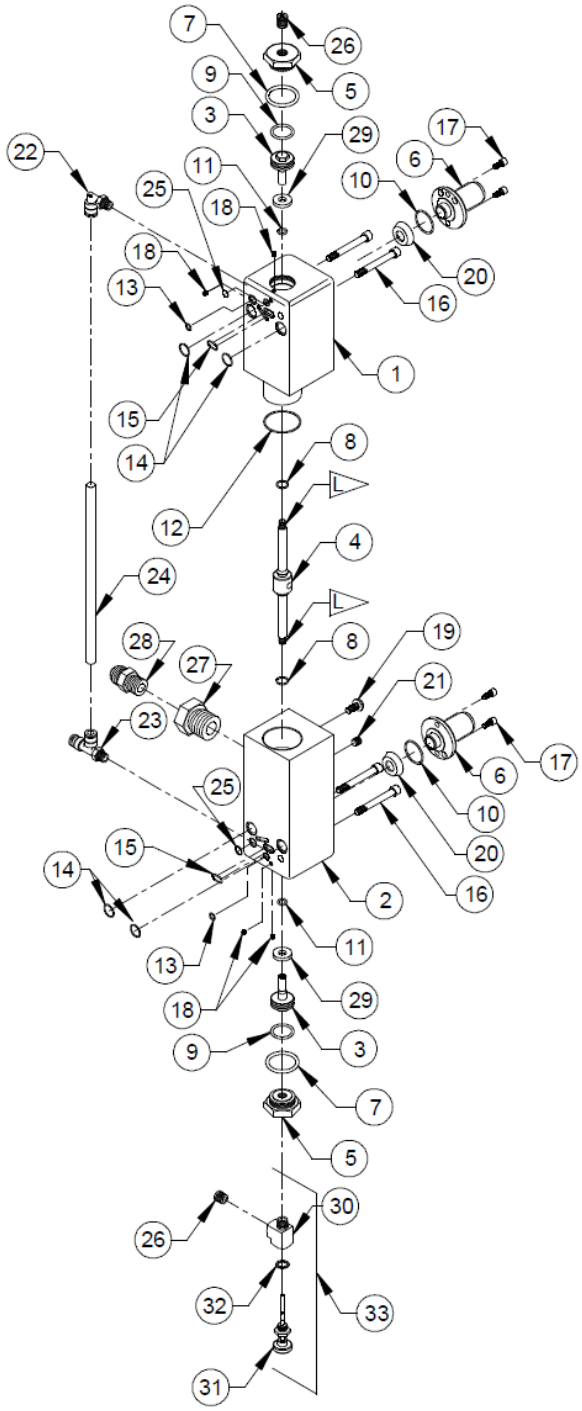

L USE REMOVABLE LOCTITE™ ON THESE THREADS AT ASSEMBLY

MAGNUM VENUS PRODUCTS

Shift Block for VPH-5000,7000,10000	VPH-SB-XL

REV.- 10/14/05 BT2
REV. A - ADDED REPAIR KIT 06-04-07 BT2

Shift Block fof VPH-5000,7000,10000
PARTS LIST

ITEM	PART NO.	QTY	DESCRIPTION
1	VPH-5001	1	UPPER VALVE BLOCK
2	MPH-5001	1	LOWER VALVE BLOCK
3	MPH-2517	2	VALVE PISTON
4	VPH-5005	1	VALVE POPPET
5	MPH-2521	2	VALVE END CAP
6	MPH-5009	2	VALVE EXHAUST
* 7	O-B-019	2	O-RING
* 8	O-U-206-90	2	O-RING
* 9	O-B-116	2	O-RING
* 10	O-B-026	2	O-RING
* 11	O-D-010-90	2	O-RING
* 12	O-B-125	1	O-RING
* 13	O-B-008	2	O-RING
* 14	O-B-014	4	O-RING
* 15	O-B-012	2	O-RING
16	F-CS-04C-40-SS	4	SOCKET HEAD CAP SCREW
17	F-CS-04C-08-SS	4	SOCKET HEAD CAP SCREW
18	F-SS-832-02-SS	4	SET SCREW
19	F-BHCS-04C-16-SS	1	BUTTON HEAD CAP SCREW
* 20	MPH-5010	2	DIAPHRAGM
21	PF-AP-04-SS	1	PIPE PLUG
22	MPH-2539	1	PUSH POLY FITTING - MALE ELBOW
23	MPH-2538	1	PUSH POLY FITTING - MALE TEE
24	MS-2052-1	.56ft	Ø1/4 x 6-3/4 TUBING
* 25	O-B-011	2	O-RING
26	PF-AP-02-SS	2	PIPE PLUG
27	PF-RB-08-06	1	PIPE BUSHING
28	PF-HN-06-06S	1	HEX NUT
29	MPH-3262	2	PISTON STOP
30	PF-ST-02-BR	1	TEE FITTING
31	MPH-2546-01	1	VALVE STEM ASSY
32	MPH-2545	1	SEAL

REPAIR KITS

	PART NO.	DESCRIPTION
*	MPH-SB-XL-SK	SEAL KIT

OPTIONAL PARTS AND ASSEMBLIES
PARTS LIST

ITEM	PART NO.	QTY	DESCRIPTION
33	MPH-2542	1	RESET BUTTON ASSY

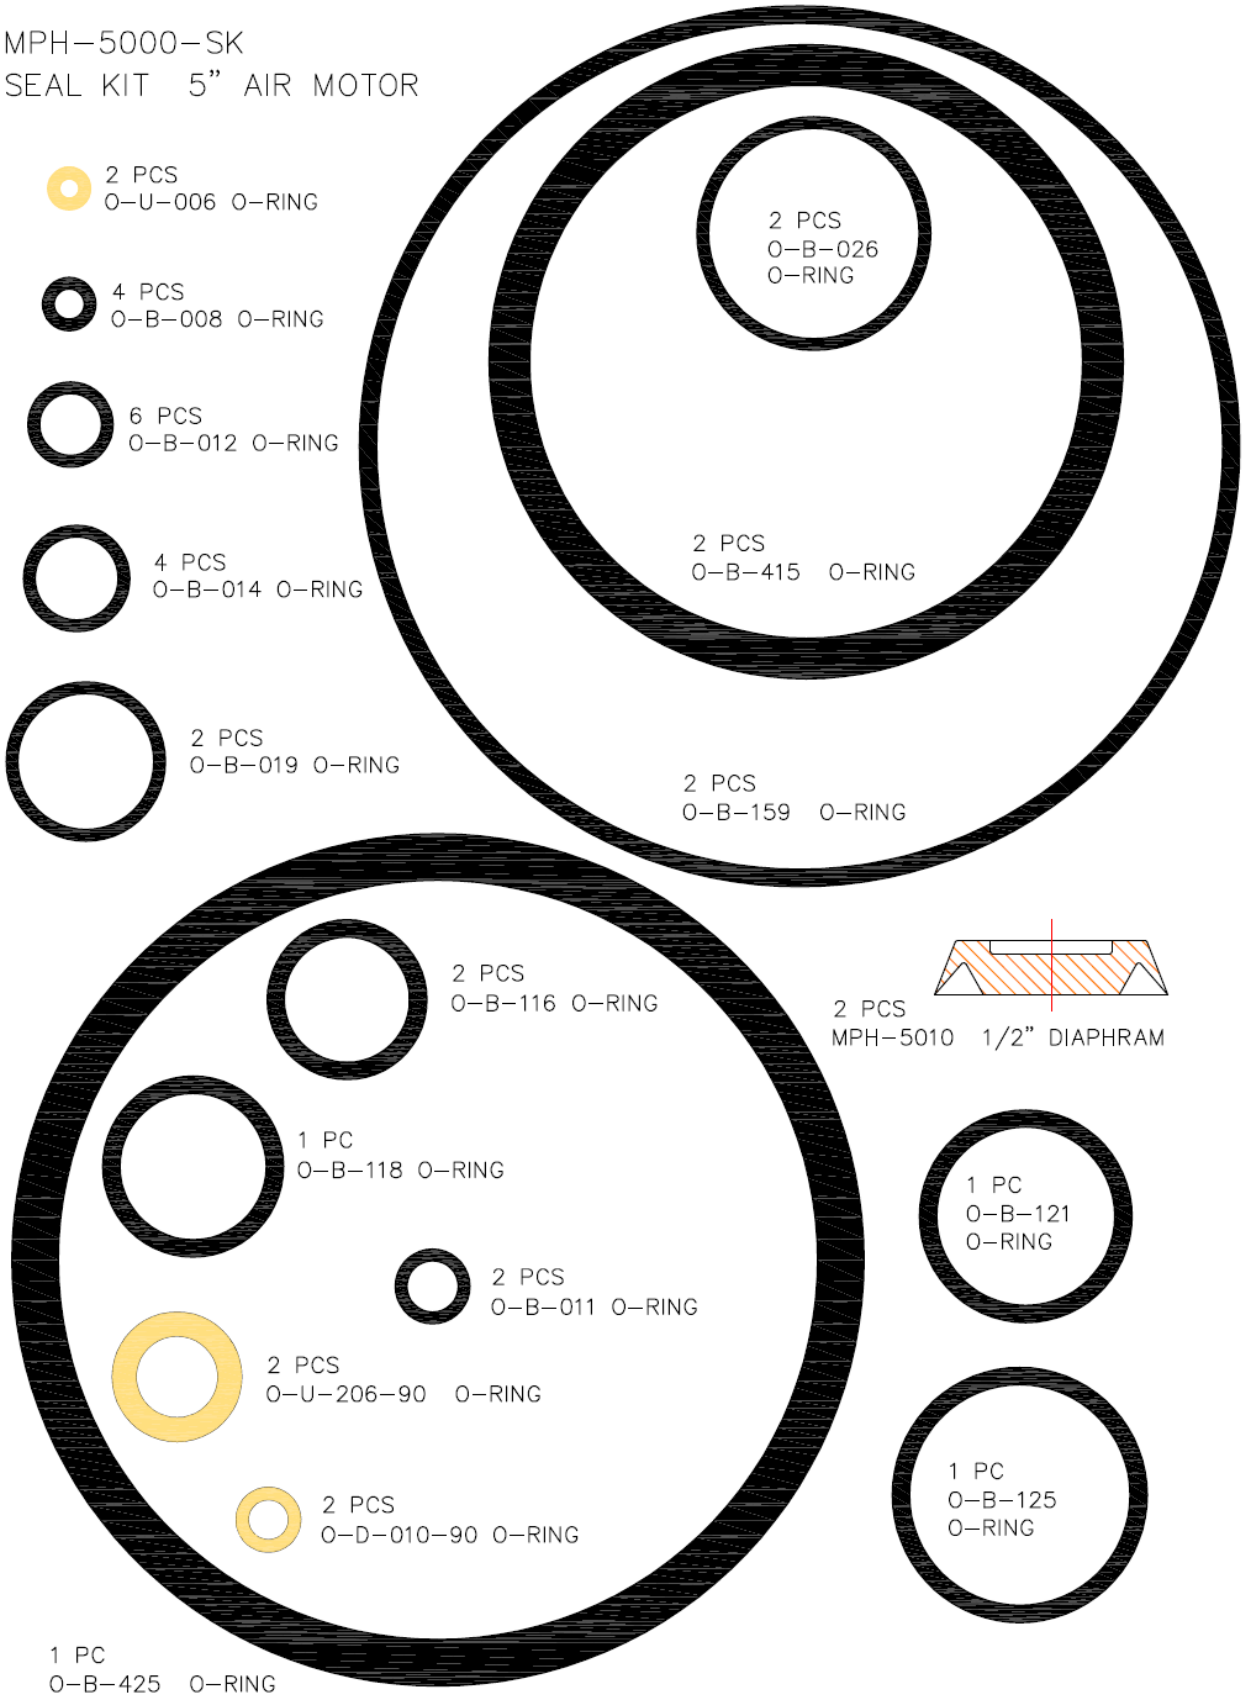
MPH–5000–SK
SEAL KIT 5" AIR MOTOR
2 PCS
O–U–006 O–RING
4 PCS
O–B–008 O–RING
6 PCS
O–B–012 O–RING
4 PCS
O–B–014 O–RING
2 PCS
O–B–019 O–RING
2 PCS
O–B–026
O–RING
2 PCS
O–B–415 O–RING
2 PCS
O–B–159 O–RING
2 PCS
O–B–116 O–RING
1 PC
O–B–118 O–RING
2 PCS
O–B–011 O–RING
2 PCS
O–U–206–90 O–RING
2 PCS
O–D–010–90 O–RING
1 PC
O–B–425 O–RING
2 PCS
MPH–5010 1/2" DIAPHRAM
1 PC
O–B–121
O–RING
1 PC
O–B–125
O–RING

MPH–SB–XL–SK
SEAL KIT 5" AIR MOTOR

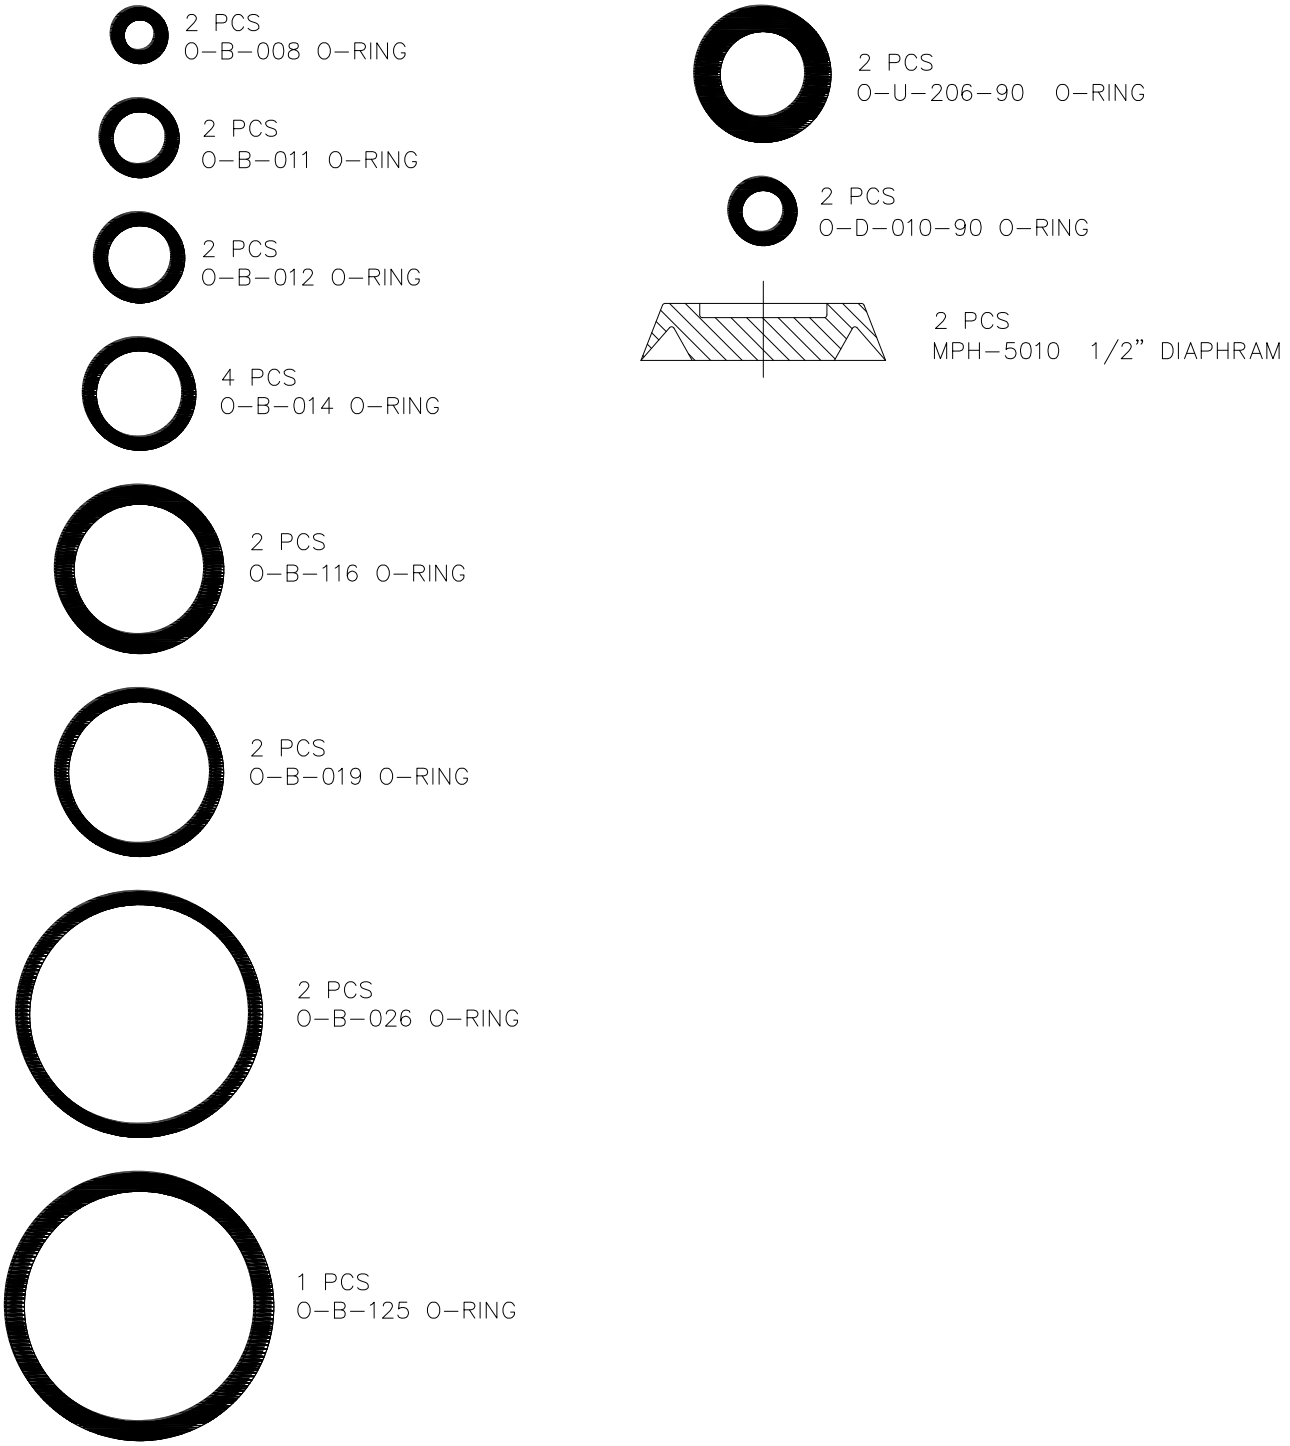

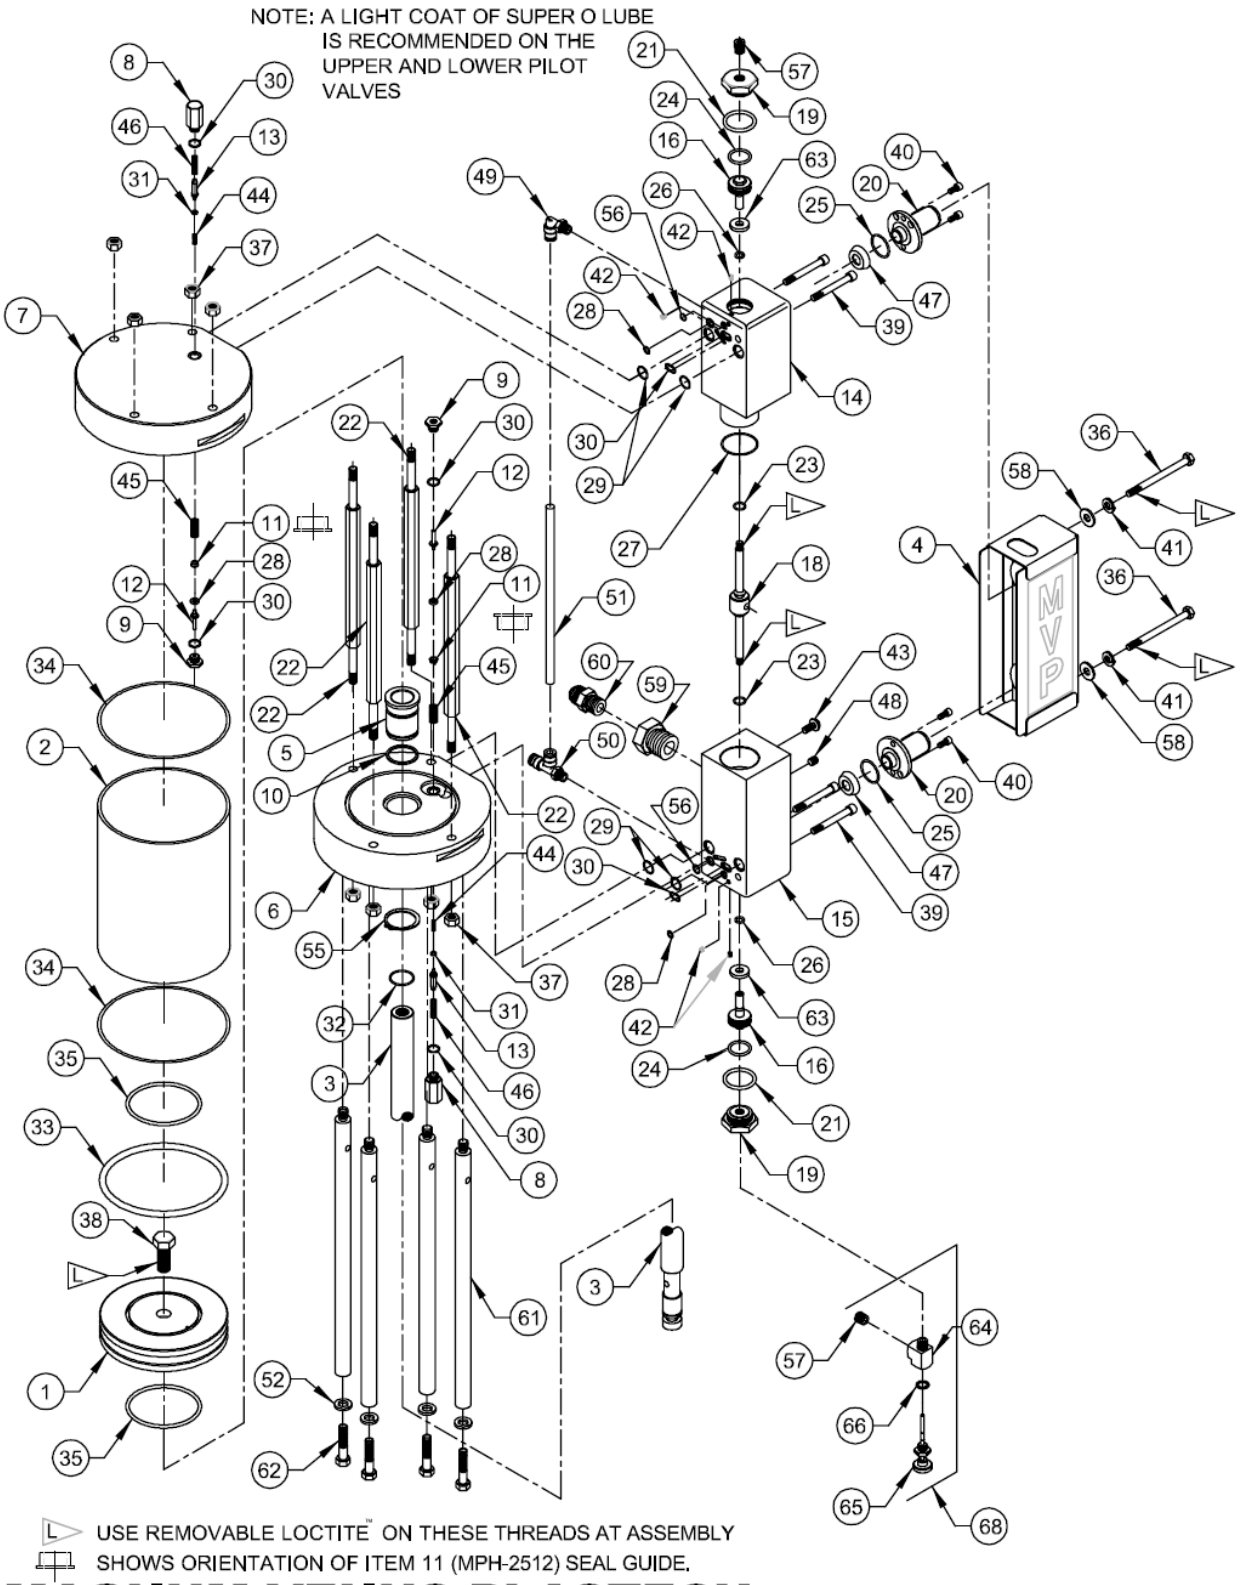
NOTE: A LIGHT COAT OF SUPER O LUBE IS RECOMMENDED ON THE UPPER AND LOWER PILOT VALVES
USE REMOVABLE LOCTITE™ ON THESE THREADS AT ASSEMBLY
SHOWS ORIENTATION OF ITEM 11 (MPH-2512) SEAL GUIDE.

MAGNUM VENUS PLASTECH

Assembly - 5" Power Head 4" Stroke	VPH-5000-DHV

REV - 05/19/10 BT2
A - ADDED SUPER O LUBE NOTE FOR PILOT VALVES 05/25/11 BT2

Assembly - 5" Power Head 4" Stroke VPH-5000-DHV

PARTS LIST

ITEM	PART NO.	QTY	DESCRIPTION
1	MPH-5006	1	PISTON - 5" PUMP
2	VPH-5002	1	CYLINDER - 5" x 4" STROKE PUMP
3	VPH-4259	1	PISTON ROD
4	VPH-5004-01	1	MUFFLER ASSY - 4" STROKE PUMP
5	VPH-4254	1	PISTON ROD BUSHING
6	MPH-5004-DHV	1	LOWER ENDCAP - 5" PUMP
7	MPH-5003	1	UPPER ENDCAP - 5" PUMP
8	MPH-2541	2	INLET SPRING HOUSING - PILOT VALVE
9	MPH-2511-01	2	ASSY - STEM SEAL
* 10	O-B-121	1	O-RING
11	MPH-2512	2	SEAL GUIDE
12	MPH-2513	2	VALVE STEM - PILOT VALVE
13	MPH-2540	2	INLET ROD - PILOT VALVE
14	VPH-5001	1	UPPER VALVE BLOCK - 4" STROKE PUMP
15	MPH-5001	1	LOWER VALVE BLOCK
16	MPH-2517	2	VALVE PISTON
18	VPH-5005	1	VALVE POPPET
19	MPH-2521	2	VALVE END CAP
20	MPH-5009	2	VALVE EXHAUST
* 21	O-B-019	2	O-RING
22	VPH-5003	4	TIE ROD 4" STROKE PUMP
* 23	O-U-206-90	2	O-RING
* 24	O-B-116	2	O-RING
* 25	O-B-026	2	O-RING
* 26	O-D-010-90	2	O-RING
* 27	O-B-125	1	O-RING
* 28	O-B-008	4	O-RING
* 29	O-B-O14	4	O-RING
* 30	O-B-012	6	O-RING
* 31	O-U-006	2	O-RING
* 32	O-B-118	1	O-RING
* 33	O-B-425	1	O-RING
* 34	O-B-159	2	O-RING
* 35	O-B-415	2	O-RING
36	F-HB-04C-56-SS	2	HEX HEAD CAP SCREW
37	F-HN-06F	8	HEX NUT
38	F-HB-08F-20-GR5	1	HEX HEAD CAP SCREW
39	F-CS-04C-40-SS	4	SOCKET HEAD CAP SCREW
40	F-CS-04C-08-SS	4	SOCKET HEAD CAP SCREW
41	F-SW-04-SS	2	LOCK WASHER
42	F-SS-832-02-SS	4	CUP POINT SET SCREW
43	F-BHCS-04C-16-SS	1	BUTTON HEAD CAP SCREW
44	MPH-2526	2	SPRING
45	MPH-2528	2	SPRING
46	MPH-2533	2	SPRING
* 47	MPH-5010	2	DIAPHRAGM
48	PF-AP-04-SS	1	PIPE PLUG
49	MPH-2539	1	PUSH POLY FITTING - MALE ELBOW
50	MPH-2538	1	PUSH POLY FITTING - MALE TEE
51	MS-2052-1	.56ft	Ø1/4 x 6-3/4 POLY TUBING
52	F-SW-06	4	LOCK WASHER
55	MPH-3261	1	SNAP - RING
* 56	O-B-011	2	O-RING
57	PF-AP-02-SS	2	PIPE PLUG
58	F-FW-04	2	FLAT WASHER
59	PF-RB-08-06	1	PIPE BUSHING
60	PF-HN-06-06S	1	ADAPTER
61	2104-4-1	4	TIE ROD
62	F-HB-06C-24-GR8	4	GRADE 8 HEX CAP SCREW
63	MPH-3262	2	PISTON STOP

PARTS LIST

ITEM	PART NO.	QTY	DESCRIPTION
64	00276	1	TEE FITTING
65	MPH-2546-01	1	VALVE STEM ASSY
66	MPH-2545	1	SEAL
67	DONOTOILAIRMOTOR	1	DO NOT OIL DECAL (NOT SHOWN)

OPTIONAL PARTS AND ASSEMBLIES
PARTS LIST

ITEM	PART NO.	QTY	DESCRIPTION
68	MPH-2542	1	RESET BUTTON ASSY
	VPH-SB-XL	1	SHIFT BLOCK ASSY

REPAIR KITS

	PART NO.	DESCRIPTION
*	MPH-5000-SK	SEAL KIT

* COMPONENTS INCLUDED WITH SEAL KIT.

FIGURE 1-1

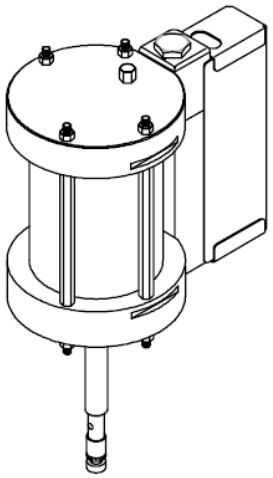

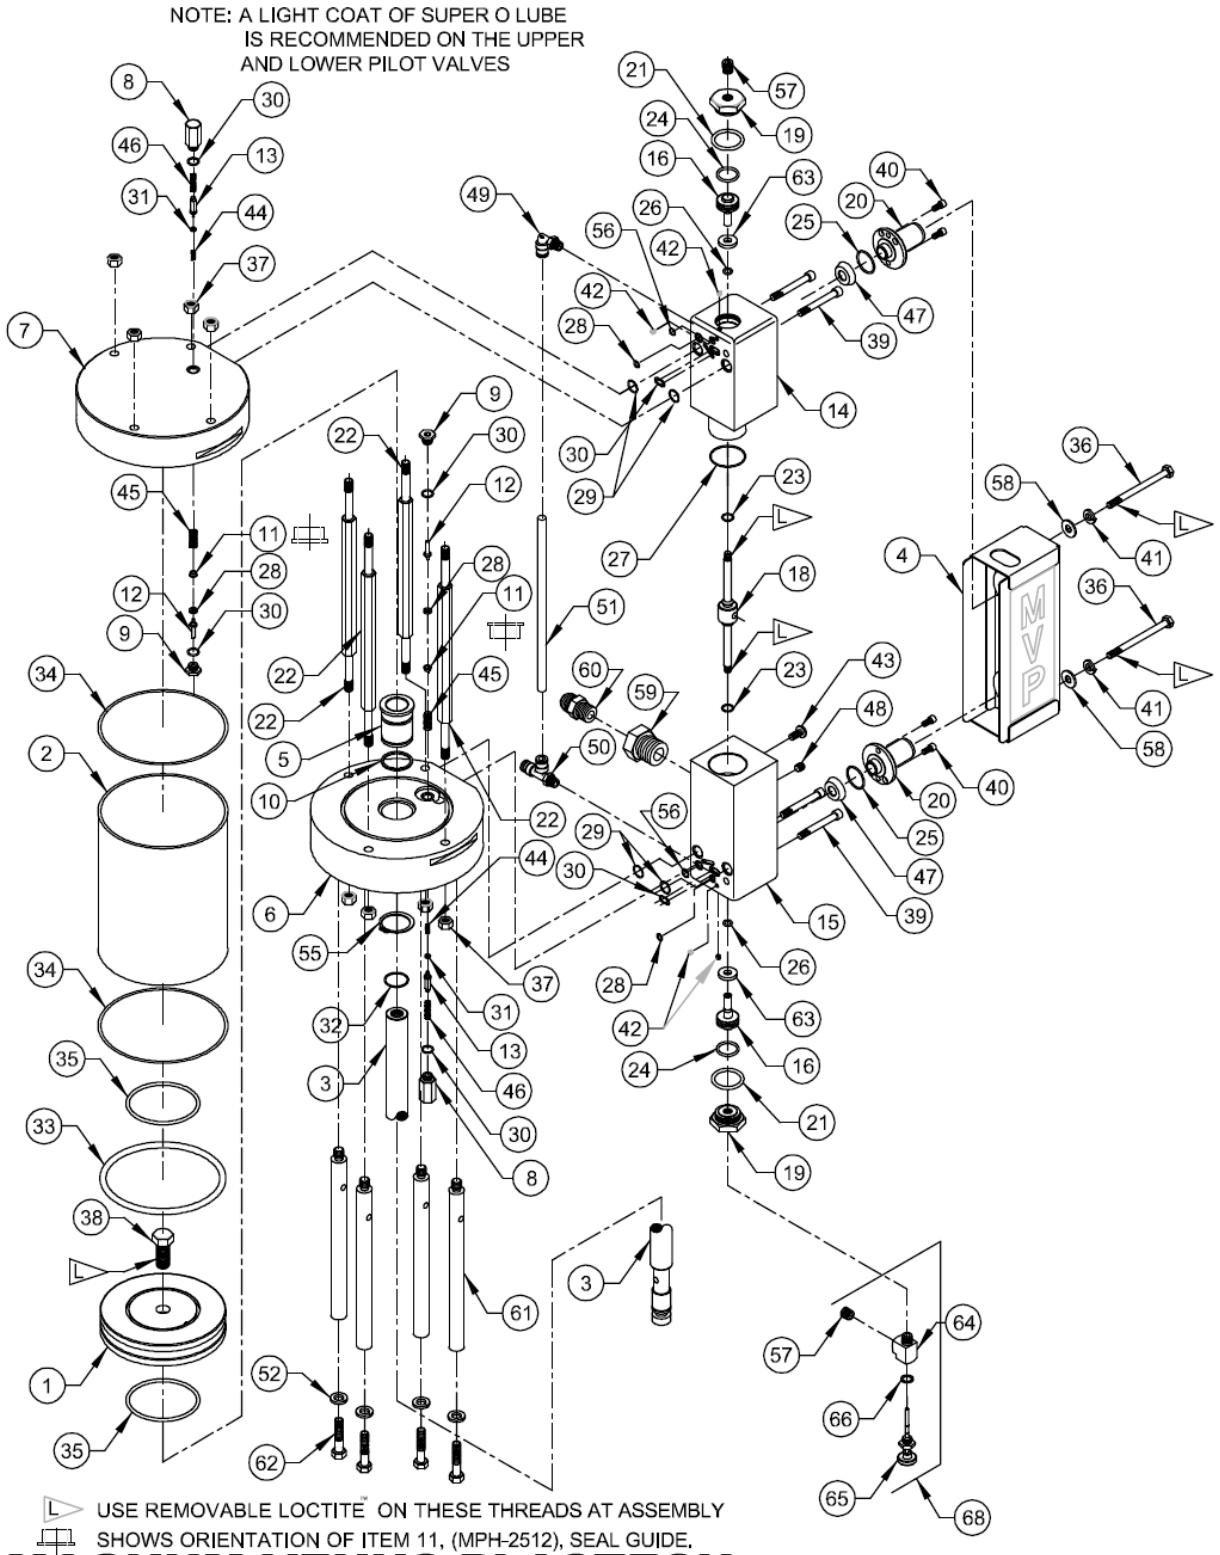
NOTE: A LIGHT COAT OF SUPER O LUBE IS RECOMMENDED ON THE UPPER AND LOWER PILOT VALVES
USE REMOVABLE LOCTITE™ ON THESE THREADS AT ASSEMBLY
SHOWS ORIENTATION OF ITEM 11, (MPH-2512), SEAL GUIDE.
MAGNUM VENUS PLASTECH
5" Power Head - 4" Stroke
VPH-5000-DUO
REV - 05/29/07 BT2
REV A - ITEM 51 WAS 01417 11/09/07 BT2
REV B - ADDED SUPER O LUBE NOTE FOR PILOT VALVES 05/25/11 BT2

5" Power Head 4" Stroke VPH-5000-DUO

PARTS LIST

ITEM	PART NO.	QTY	DESCRIPTION
1	MPH-5006	1	PISTON - 5" PUMP
2	VPH-5002	1	CYLINDER - 5" x 4" STROKE PUMP
3	VPH-4259	1	PISTON ROD
4	VPH-5004-01	1	MUFFLER ASSY - 4" STROKE PUMP
5	VPH-4254	1	PISTON ROD BUSHING
6	MPH-5004	1	LOWER ENDCAP - 5" PUMP
7	MPH-5003	1	UPPER ENDCAP - 5" PUMP
8	MPH-2541	2	INLET SPRING HOUSING - PILOT VALVE
9	MPH-2511-01	2	ASSY - STEM SEAL
* 10	O-B-121	1	O-RING
11	MPH-2512	2	SEAL GUIDE
12	MPH-2513	2	VALVE STEM - PILOT VALVE
13	MPH-2540	2	INLET ROD - PILOT VALVE
14	VPH-5001	1	UPPER VALVE BLOCK - 4" STROKE PUMP
15	MPH-5001	1	LOWER VALVE BLOCK
16	MPH-2517	2	VALVE PISTON
18	VPH-5005	1	VALVE POPPET
19	MPH-2521	2	VALVE END CAP
20	MPH-5009	2	VALVE EXHAUST
* 21	O-B-019	2	O-RING
22	VPH-5003	4	TIE ROD 4" STROKE PUMP
* 23	O-U-206-90	2	O-RING
* 24	O-B-116	2	O-RING
* 25	O-B-026	2	O-RING
* 26	O-D-010-90	2	O-RING
* 27	O-B-125	1	O-RING
* 28	O-B-008	4	O-RING
* 29	O-B-O14	4	O-RING
* 30	O-B-012	6	O-RING
* 31	O-U-006	2	O-RING
* 32	O-B-118	1	O-RING
* 33	O-B-425	1	O-RING
* 34	O-B-159	2	O-RING
* 35	O-B-415	2	O-RING
36	F-HB-04C-56-SS	2	HEX HEAD CAP SCREW
37	F-HN-06F	8	HEX NUT
38	F-HBFT-08C-20-GR5	1	HEX HEAD CAP SCREW
39	F-CS-04C-40-SS	4	SOCKET HEAD CAP SCREW
40	F-CS-04C-08-SS	4	SOCKET HEAD CAP SCREW
41	F-SW-04-SS	2	LOCK WASHER
42	F-SS-832-02-SS	4	CUP POINT SET SCREW
43	F-BHCS-04C-16-SS	1	BUTTON HEAD CAP SCREW
44	MPH-2526	2	SPRING
45	MPH-2528	2	SPRING
46	MPH-2533	2	SPRING
* 47	MPH-5010	2	DIAPHRAGM
48	PF-AP-04-SS	1	PIPE PLUG
49	MPH-2539	1	PUSH POLY FITTING - MALE ELBOW
50	MPH-2538	1	PUSH POLY FITTING - MALE TEE
51	MS-2052-1	.56ft	Ø1/4 x 6-3/4 POLY TUBING
52	F-SW-06	4	LOCK WASHER
55	MPH-3261	1	SNAP - RING
* 56	O-B-011	2	O-RING
57	PF-AP-02-SS	2	PIPE PLUG
58	F-FW-04	2	FLAT WASHER
59	PF-RB-08-06	1	PIPE BUSHING
60	PF-HN-06-06S	1	ADAPTER
61	DUO-3006	4	TIE ROD
62	F-HB-06C-24-GR8	4	GRADE 8 HEX CAP SCREW
63	MPH-3262	2	PISTON STOP

PARTS LIST

ITEM	PART NO.	QTY	DESCRIPTION
64	00276	1	TEE FITTING
65	MPH-2546-01	1	VALVE STEM ASSY
66	MPH-2545	1	SEAL
67	DONOTOILAIRMOTOR	1	DO NOT OIL DECAL (NOT SHOWN)

OPTIONAL PARTS AND ASSEMBLIES PARTS LIST

ITEM	PART NO.	QTY	DESCRIPTION
68	MPH-2542	1	RESET BUTTON ASSY
	VPH-SB-XL	1	SHIFT BLOCK ASSY

REPAIR KITS

	PART NO.	DESCRIPTION
*	MPH-5000-SK	SEAL KIT

FIGURE 1-1

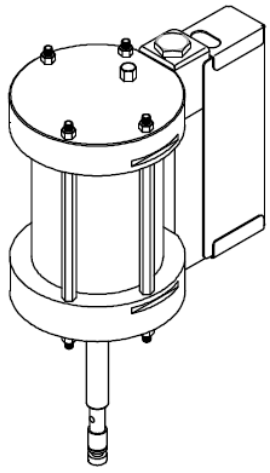

* COMPONENTS INCLUDED WITH SEAL KIT.

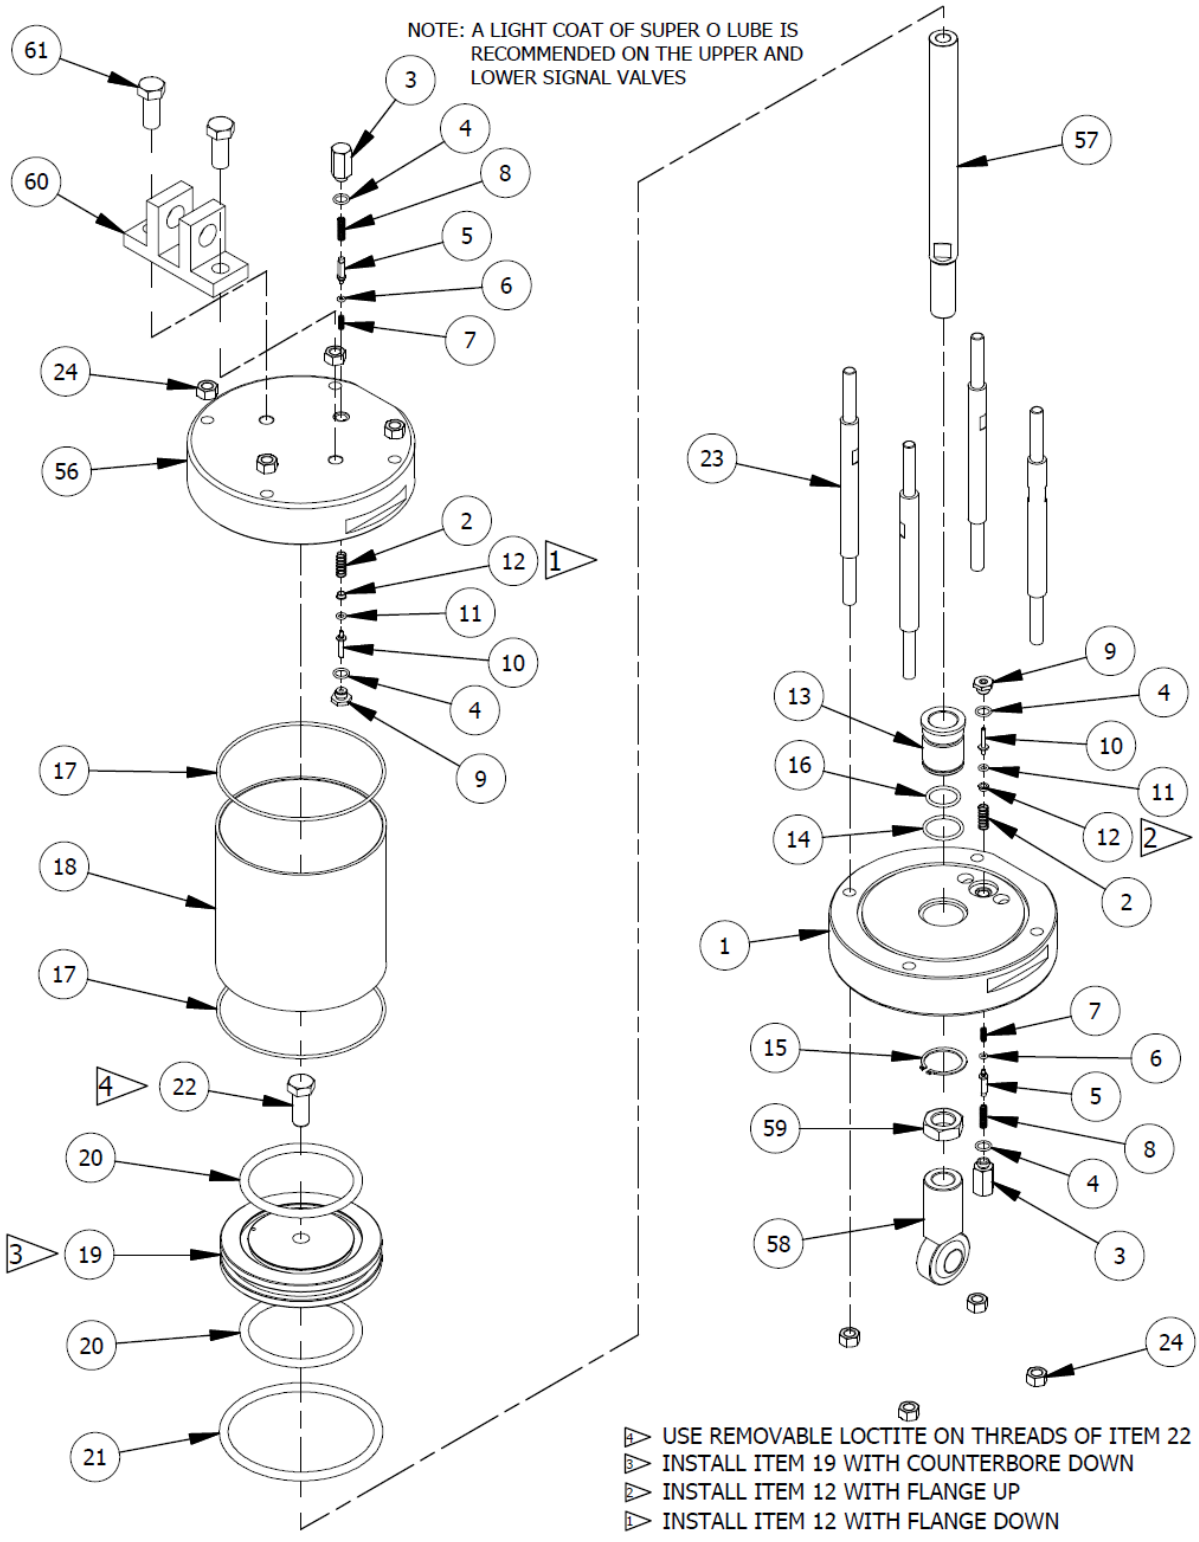

MAGNUM VENUS PLASTECH

5" POWER HEAD	UPPH-5000

REV:B 06/03/11 SHEET 1 / 3 3/3/2010

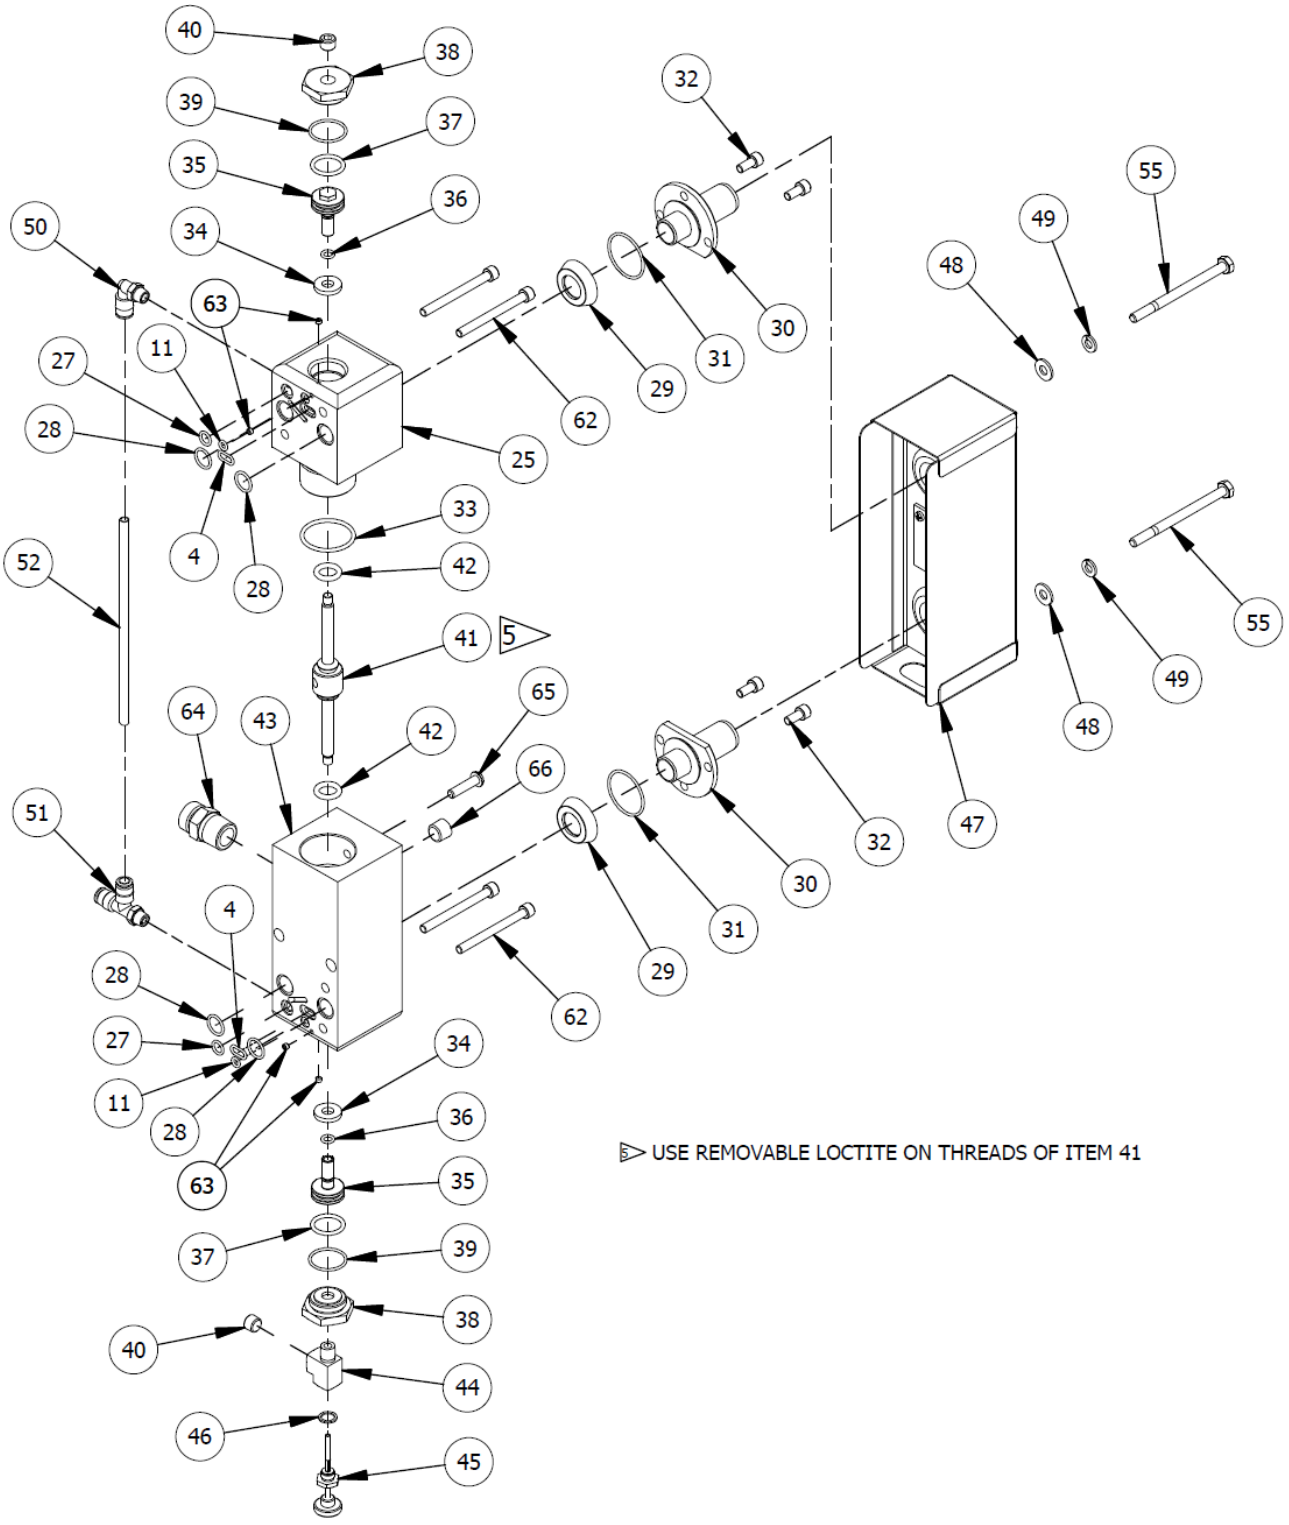

MAGNUM VENUS PLASTECH

5" POWER HEAD	UPPH-5000

REV:B 06/03/11 SHEET 2 / 3 3/3/2010

	Parts List			
	ITEM	PART NUMBER	QTY	DESCRIPTION
	1	MPH-5004	1	LOWER END CAP - 5" POWER HEAD
	2	MPH-2528	2	SPRING
	3	MPH-2541	2	SPRING HOUSING- PILOT VALVE
*	4	O-B-012	6	O-RING
	5	MPH-2540	2	INLET ROD- PILOT VALVE
*	6	O-U-006	2	O-RING
	7	MPH-2526	2	SPRING
	8	MPH-2533	2	COMPRESSION SPRING
	9	MPH-2511-01	2	STEM SEAL ASSY- PILOT VALVE
	10	MPH-2513	2	VALVE STEM- PILOT VALVE
*	11	O-B-008	4	O-RING
	12	MPH-2512	2	SEAL GUIDE- PILOT VALVE
	13	VPH-4254	1	BUSHING- 7/8 DIA. PISTON ROD
*	14	O-B-121	1	O-RING
	15	MPH-3261	1	SNAP RING - EXTERNAL
*	16	O-B-118	1	O-RING
*	17	O-B-159	2	O-RING
	18	VPH-5002	1	CYLINDER - 5" POWER HEAD 4" STROKE
	19	MPH-5006	1	PISTON - ∅5"
*	20	O-B-415	2	O-RING
*	21	O-B-425	1	O-RING
	22	F-HB-08F-20-GR5	1	HEX BOLT
	23	VPH-5003	4	TIE ROD
	24	F-HN-06F	8	HEX NUT
	25	VPH-5001	1	UPPER VALVE BLOCK
*	27	O-B-011	2	O-RING
*	28	O-B-014	4	O-RING
*	29	MPH-5010	2	DIAPHRAGM
	30	MPH-5009	2	EXHAUST PORT
*	31	O-B-026	2	O-RING
	32	F-CS-04C-08-SS	4	SOCKET HEAD CAP SCREW
*	33	O-B-125	1	O-RING
	34	MPH-3262	2	PISTON STOP
	35	MPH-2517	2	VALVE PISTON
*	36	O-D-010-90	2	O-RING
*	37	O-B-116	2	O-RING
	38	MPH-2521	2	VALVE END CAP
*	39	O-B-019	2	O-RING
	40	PF-AP-02-SS	2	PIPE PLUG
	41	VPH-5005	1	VALVE ROD POPPET
*	42	O-U-206-90	2	O-RING
	43	MPH-5001	1	LOWER VALVE BLOCK
	44	PF-ST-02-BR	1	TEE FITTING
	45	MPH-2546-01	1	RESET STEM ASSEMBLY
	46	MPH-2545	1	SEAL
	47	VPH-5004-01	1	MUFFLER ASSEMBLY
	48	F-FW-04	2	FLAT WASHER
	49	F-SW-04-SS	2	LOCK WASHER
	50	MPH-2539	1	MALE ELBOW
	51	MPH-2538	1	MALE POLY TEE FITTING
	52	MS-2052-1	.56 FT	POLY TUBE
	55	F-HB-04C-56-SS	2	HEX BOLT
	56	UPPH-5012	1	UPPER END CAP - 5"
	57	UPPH-7009	1	PISTON ROD
	58	B-BJRE-.750-2-HS	1	FEMALE BALL ROD END
	59	F-JN-12F	1	JAM NUT
	60	UPPH-7039	1	POWERHEAD CLEVIS
	61	F-HB-08C-20	2	HEX BOLT
	62	F-CS-04C-40-SS	4	SOCKET HEAD CAP SCREW
	63	F-SS-832-02-SS	4	SS SET SCREW
	64	PF-HN-08-08S	1	HOSE ADAPTER
	65	F-BHCS-04C-16-SS	1	BUTTON HEAD CAP SCREW
	66	PF-AP-04-SS	1	ALLEN PLUG

OPTIONAL PARTS AND ASSEMBLIES

PARTS LIST

PART No.	QTY	DESCRIPTION
MPH-2542	1	RESET BUTTON ASSY
VPH-SB-XL	1	SHIFT BLOCK ASSY

REPAIR KITS

PART No.	DESCRIPTION
* MPH-5000-SK	SEAL KIT

*ASTERISKS DENOTE PARTS IN SEAL KIT

MAGNUM VENUS PLASTECH

5" POWER HEAD	UPPH-5000

REV: B 06/03/11 SHEET 3 / 3 3/3/2010

Revision Information:

Rev. 03/2010	Converted to Word, updated drawings, added revision page and other general corrections.
Rev. 04/2010	Added reference for the UPPH-5000 Powerhead
Rev. 05/2010	Added reference and drawing for the VPH-5000-DHV Powerhead
Rev. 07/2011	Included the note for the SUPERLUBE grease on the Upper and Lower Pilot Valves. Updated the drawings in the manual.
Rev. 05/2012	Updated the Logo, MVP Address and the manual format, added the Terms and Conditions section.
Rev. 09/2014	Updated the manual format, Address, name and the Terms & Conditions of Sale. Removed references to Plastech. Updated drawings as required.

MagnumVenusProducts™

CORPORATE HEADQUARTERS and MANUFACTURING
200A Perimeter Park Road · Knoxville, TN 37922 · USA · Tel: +1 (865) 321-8809

TECHNOLOGY CENTER and MANUFACTURING
1862 Ives Ave. * Kent, WA 98032 * Tel 253-854-2660 * Fax 253-854-1666

E-mail: info@mvpind.com · www.mvpind.com

Assemblies Covered in this Manual:

MPH-5000	5” PowerSlide Powerhead – 5-5/8” Stroke
UPPH-5000	5” PowerSlide Powerhead – 4” Stroke – UP Unit
VPH-5000	5” PowerSlide Powerhead – 4” Stroke
VPH-5000-DHV	5” PowerSlide Powerhead – 4” Stroke – Dual HV Unit
VPH-5000-DUO	5” PowerSlide Powerhead – 4” Stroke – Duo Unit